



INSTALLATION MANUAL




Split System air conditioners

RZQ71B9V3B
RZQ100B9V3B
RZQ125B9V3B

RZQ100B8W1B
RZQ125B8W1B
RZQ140B8W1B

	↖	↗	↘	↙	↕		A	B1	B2	C	D1	D2	E	L1/L2
	✓							≥50(100)						
	✓		✓	✓			≥100	≥100		≥100				
	✓				✓			≥100				≤500	≥1000	
	✓		✓	✓	✓		≥150	≥150		≥150		≤500	≥1000	
		✓									≥500			
		✓			✓				≤500		≥500		≥1000	
	✓	✓				L1<L2		≥50(100)			≥500			
						L2<L1		≥50(100)			≥500			
						L1<L2	L1≤H	≥150(250)	≤500		≥750		≥1000	0<L1≤1/2H
	✓	✓			✓	L2<L1	L2≤H	≥50(100)			≥1000(1000)	≥500	≥1000	0<L1≤1/2H
	✓		✓	✓			≥200	≥200(300)		≥1000				
	✓		✓	✓	✓		≥200	≥200(300)		≥1000		≤500	≥1000	
		✓									≥1000			
		✓			✓				≤500		≥1000		≥1000	
						L1<L2		≥200(300)			≥1000			0<L2≤1/2H
	✓	✓				L2<L1		≥150(250)			≥1000(1500)			1/2H<L2≤H
								≥200(300)						
						L1<L2	L1≤H	≥200(300)	≤500		≥1000		≥1000	0<L1≤1/2H
	✓	✓			✓	L2<L1	L2≤H	≥150(250)			≥1000(1500)	≤500	≥1000	1/2H<L2≤H
								≥200(300)						

1

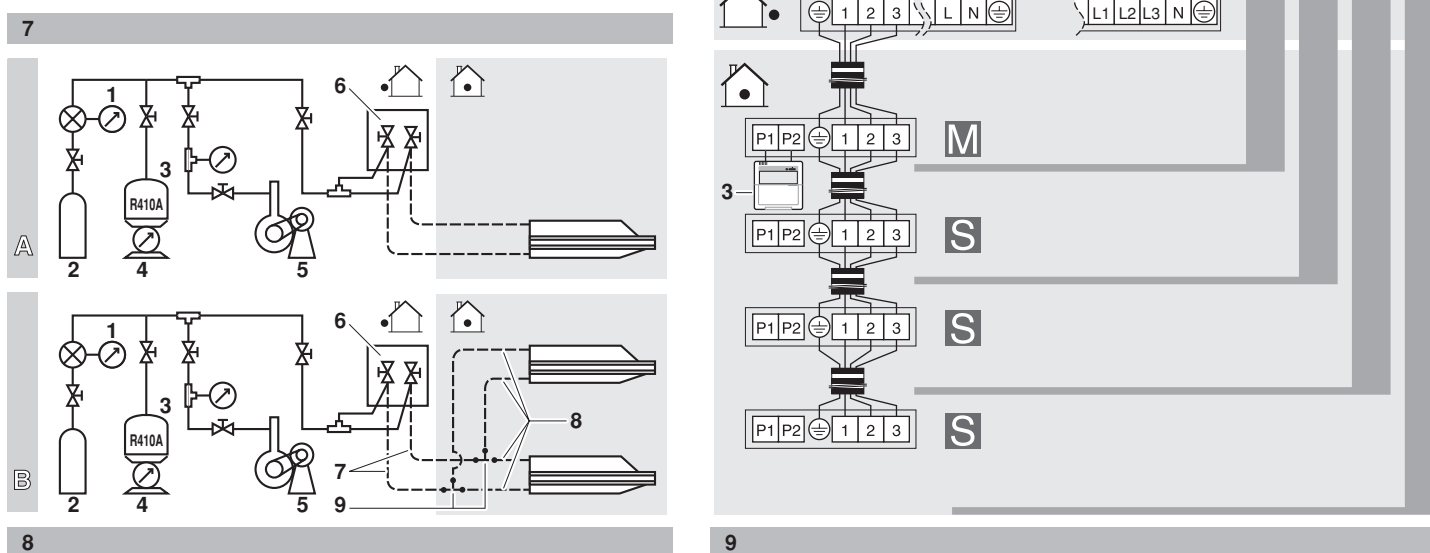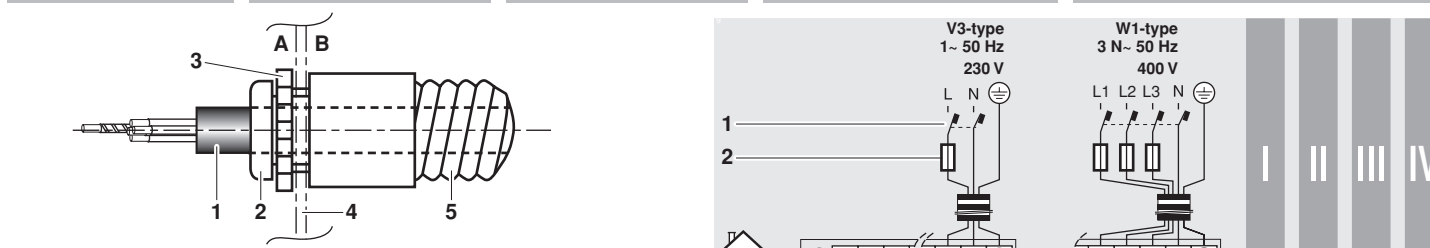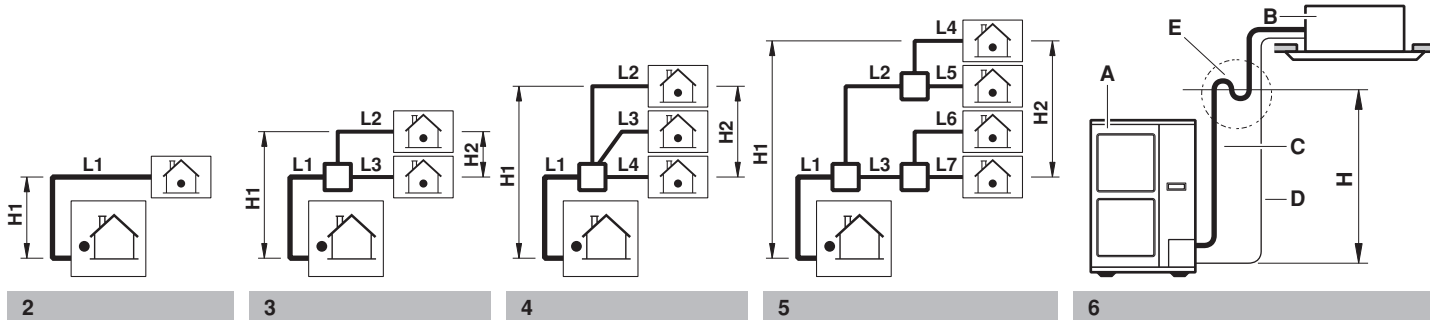

8 9

CE - DECLARATION-OF-CONFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СООТВЕТСТВИИ
CE - OPFYLDELSESERKLÆRING
CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELSE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUUDESTA
CE - PROHLÁŠENÍ-O-SHOĐE

CE - IZJAVA-O-USKLAĐENOSTI
CE - MEGFELELŐSÉGINYILATKOZAT
CE - DEKLARACJA-ZGODNOŚCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSDEKLARATSIOON
CE - ДЕКЛАРАЦИЯ-ЗА-СЪОТВЕТСТВИЕ

CE - ATTIKTIES-DEKLARĀCIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁSENIE-ZHODY
CE - UYUMĻULUK-BILDIRISI

Daikin Europe N.V.

01 (a) declares under its sole responsibility that the air conditioning models to which this declaration relates:

02 (b) erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:

03 (c) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:

04 (d) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:

05 (e) declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:

06 (f) dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:

07 (g) δηλώνει με αποκλειστική της ευθύνης ότι τα προϊόντα των κλιματιστικών ουσίων στα οποία αναφέρεται η παρούσα δήλωση:

08 (h) declares sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

09 (i) заявляет, исключительно под своим ответством, что модели кондиционеров воздуха, к которым относятся настоящее заявление:

01 are in conformity with the following standard(s) or other normative document(s), provided that these are in accordance with our instructions:

02 deriden tolgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/sprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:

03 sont conformes à l(au)x norm(e)s (ou autre)s document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:

04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:

05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:

06 sono conformi all(elle) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:

07 είναι σύμφωνα με το(ι) ακόλουθ(η) πρότυπο(α) ή άλλο(ι) έγγραφο(α) κανονιστικά, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

08 EN60335-2-40,

09 EN60335-2-40,

01 following the provisions of:

02 gemäß den Vorschriften der:

03 conformément aux stipulations des:

04 overeenkomstig de bepalingen van:

05 siguiendo las disposiciones de:

06 secondo le prescrizioni per:

07 σύμφωνα με τις προδιαγραφές των:

08 de acordo com o disposto em:

09 в соответствии с условиями:

17 zgodnie z postanowieniami Dyrektyw:

18 in urma prevederilor:

19 по указаниям дооб:

20 vastavalt rõhudele:

21 съгласно указания на:

22 akaisis mustat, patiekiamų:

23 evérgot prasības, kas noteiktas:

24 одобрјајуц изамова:

25 būtinu kosiama visum darak:

EN60335-2-40,

01 following the provisions of:	17 zgodnie z postanowieniami Dyrektywy
02 gemäß den Vorschriften der:	18 in urma prevederilor:
03 conformément aux stipulations des:	19 ob postavljeni dođob:
04 overeenkomstig de bepalingen van:	20 razastavni rođelene:
05 siguiendo las disposiciones de:	21 creţele şi condiţiile în:
06 segundo le prescripc�es per:	22 lakusiu maistru, pateikiamas:
07 по условиям постановки:	23 evorogit prasabas, kas noteiktas:
08 de acordo com o disposto em:	24 odzvajacis istanovana:
09 в соответствии с постановками:	25 punun kosulama vagon darak:

01	Note *	as set out in the Technical Construction File DAIKIN.TCF.021 and judged positively by KEIMA according to the Certificate 2024351-QUA.EMC02-4565 .
02	Hinweis *	wie in der Technischen Konstruktionsakte DAIKIN.TCF.021 aufgeführt und von KEIMA positiv ausgemacht gemäß der Zertifikat 2024351-QUA.EMC02-4565 .
03	Remarque *	tel que stipulé dans le Fichier de Construction Technique DAIKIN.TCF.021 et jugé positivement par KEIMA , conformément au Certificat 2024351-QUA.EMC02-4565 .
04	Bemerk *	zoals vermeld in het Technisch Constructies dossier DAIKIN.TCF.021 en in orde bevonden door KEIMA overeenkomstig het Certificaat 2024351-QUA.EMC02-4565 .
05	Nota *	tal como se expone en el Archivo de Construcción Técnica DAIKIN.TCF.021 y juzgado positivamente por KEIMA según el Certificado 2024351-QUA.EMC02-4565 .
06	Nota *	definito nel File Tecnico di Costruzione DAIKIN.TCF.021 e giudicato positivamente da KEIMA secondo il Certificato 2024351-QUA.EMC02-4565 .
07	Змістов *	опис проведено в файлі Техніч Конструкції DAIKIN.TCF.021 на підставі висновку від KEIMA σύμφωνα με το Πρωτόκολλο 2024351-QUA.EMC02-4565 .
08	Nota *	tal como establecido no Ficheiro Técnico de Construção DAIKIN.TCF.021 e como o parecer positivo de KEIMA de acordo com o Certificado 2024351-QUA.EMC02-4565 .
09	Примечание *	как указано в Досье технического толкования DAIKIN.TCF.021 в соответствии с положительным решением KEIMA согласно Сертификату 2024351-QUA.EMC02-4565 .

10 (X) erklærer under enansvar, at klimaindegningsmodellerne, som denne deklaration vedrører:

11 (S) deklarerer i egen skat og i hvidt navn, at tilfordsindingsmodellerne i som berors av denna deklaration innebar att:

12 (X) erklærer et fullstendig ansvar br at de tilfordsindingsmodeller som berors av denna deklarasjon innebaerer at:

13 (X) imolitas ynskomaan omalla vastuulaan, etta laatan imolituksen la rtoittaan tilsoittolittaridenen mallit:

14 (Z) protaajue ja sve plne odpovidnosti. Ze modely klimatizace, k nimz se bolo prohlášeni vzlajuje:

15 (H) izpajuje pod skljucivo vlastitom odgovornostu de su model klima uređaja na koje se ova žavana odnosi:

16 (H) teljes felelősséggel tudatában kijelenti, hogy a klímaberendezés modellek, melyekre e nyilatkozat vonatkozik

08 estão em conformidade com as seguintes instruções:

09 соответствует следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:

10 overholder følgende standard(er) eller andre/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instruktør:

11 respektive uttusingh ar utford i overensstemmelse med och tilljer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:

12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsetning av at disse brukes i henhold til våre instruktør:

13 vasaatan saaravanden standard ja muiden õijelisten dokumenten vaatimiskia eelajttaan, etta nita kaytelaan õijedenne muakaset:

14 za preipakadu, ze jsou v souladu s našimi pokyny, odpovíjaj následujícím normám nebo normativním dokumentům:

15 skelle sa slijedim standardom(ma) ili drugim normativnim dokumentom(ma), uz uvjet da se oni koriste u skladu s našim uputama:

Low Voltage 73/23/EEC
Machinery Safety 98/37/EEC
Electromagnetic Compatibility 89/336/EEC *

10	Bemærk *	sen afdeling den Tekniske Konstruktionsafdeling DAKIN TCF 021 og positivt vurderet af KEIMA i henhold til Certifikat 2024351-QUA-ENC02-4565 .
11	Information *	anvisningen er afholdt i henhold med den Tekniske Konstruktionsafdeling DAKIN TCF 021 som positivt indgås af KEIMA i henhold til Certifikat 2024351-QUA-ENC02-4565 .
12	Merk *	fra samt fra henkommer i den Tekniske Konstruktionsafdeling DAKIN TCF 021 og gennem positiv bedømmelse af KEIMA i henhold til Certifikat 2024351-QUA-ENC02-4565 .
13	Huom *	joka on safety Teknisk Assistent DAKIN TCF 021 i øjeblikket KEIMA on hykrytning.
14	Poznáma *	Sertifikaat 2024351-QUA-ENC02-4565 mikselst.
15	Napomena *	jak byt udelvnet i samarbejde tekniske konstruktion DAKIN TCF 021 i positivt afsluttet KEIMA i søludatu s ovestediment 2024351-QUA-ENC02-4565 .
16	Megjegyzés *	kako je izloženo i Databaz o tehničkih konstrukcij DAKIN TCF 021 pozitivno ocijeneno od strane KEIMA prema Certifikatu 2024351-QUA-ENC02-4565 .
17	Uwaga *	af DAKIN TCF 021 mislazi konstrukcijske dokumentacije alipjapn, af KEIMA gazolze i na mgjeljeleat af 2024351-QUA-ENC02-4565 tanislihrany szent.
		zgodnie z archiwizacją dokumentacji konstrukcyjnej DAKIN TCF 021 pozytywną opinią KEIMA i świadectwem 2024351-QUA-ENC02-4565 .

[illegible]

01	Dřevěná, as amended.	17	z předmětných povlaků.
02	Dřevěný, genitív 8. Andring.	18	Dřevěný, as amended. Dřevěná, respektive.
03	Dřevěná, telles, que modifiés.	19	Dřevěná, z velmi spončovanými.
04	Růžičkový, des gemeinsamen.	20	Dřevěná, z velmi spončovanými.
05	Dřevěná, segun lo emendado.	21	Dřevěná, z velmi spončovanými.
06	Dřevěná, omec du modifia.	22	Dřevěná, z velmi spončovanými.
07	Dřevěná, omec du modifia.	23	Dřevěná, z velmi spončovanými.
08	Dřevěná, conforme alegação em.	24	Smerice, v plátnu zvlášť.
09	Dřevěná, z velmi spončovanými.	25	Dřevěná, z velmi spončovanými.

conform celor stabilite în Dosarul tehnic de construcție **DAINKIN TCF 021** și aprobate pozitiv de **KEIMA** în conformitate cu Certificatul **2024351-QUA-EMC02-565**.

Actul este dobândit în temănișca **DAINKIN TCF 021** în obiectul și termenii **KEIMA** jărg vestarati

4655.

pagi on nădăut tehnișes documentaționsonts **DAINKIN TCF 021** jă năks tedeat **KEIMA** jărg vestarati

serifișkăile 2024351-QUA-EMC02-565.

karu e zăloknat e Akta za tehnișka konstrukcija **DAINKIN TCF 021** i oștreno polnoștreno ot **KEIMA** čimako

Certifikat 2024351-QUA-EMC02-565.

kaj nărditva Tehnișke konstrukcijs bișoje **DAINKIN TCF 021** i palativnija **KEIMA** pagal

pažmėjnija **2024351-QUA-EMC02-565.**

ka năteks tehnișkaj dokumentačija **DAINKIN TCF 021** atlištos **KEIMA** pođivnijač nămunat ka apliečna

serifișkă 2024351-QUA-EMC02-565.

ak o je stanovje e. Suroza tehnișke konstrukcijs **DAINKIN TCF 021** i kašne posuđevne **KEIMA** podla

Certifikat 2024351-QUA-EMC02-565.

DAINKIN TCF 021 Tekn. Yan Dosyadniza tehnișkiji gbi e **2024351-QUA-EMC02-565** serifișkăia gbre **KEIMA** larindin

domu. Oar ak dešednindnija

3PW25006-1A



CONTENTS

Page

Safety considerations	1
Before installation	2
Selecting installation site	3
Precautions on installation	4
Installation servicing space	4
Refrigerant pipe size and allowable pipe length	5
Precautions on refrigerant piping	6
Refrigerant piping	7
Evacuating	9
Charging refrigerant	10
Electrical wiring work	11
Test operation	13
Disposal requirements	14
Wiring diagram	15



READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION. KEEP THIS MANUAL IN A HANDY PLACE FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

SAFETY CONSIDERATIONS

The precautions listed here are divided into the following two types. Both cover very important topics, so be sure to follow them carefully.



WARNING

If the warning is not observed, it may cause serious casualties.



CAUTION

If the caution is not observed, it may cause injury or damage to the equipment.



WARNING

- For year round cooling applications with low indoor humidity conditions, such as Electronic Data Processing rooms, contact your dealer or see the engineering databook or the service manual.
- For use of air-conditioning units in applications with temperature alarm settings it is advised to foresee a delay of 10 minutes for signalling the alarm in case the alarm temperature is exceeded. The air-conditioning unit may stop for several minutes during normal operation for "defrosting of the indoor unit" or when in "thermostat-stop" operation.



WARNING

- Ask your dealer or qualified personnel to carry out installation work. Do not install the machine by yourself.
Improper installation may result in water leakage, electric shocks or fire.
- Perform installation work in accordance with this installation manual.
Improper installation may lead to water leakage, electric shocks or fire.
- When a unit is installed in a small room, it is necessary to take measures so that the leaked refrigerant amount does not exceed the limit even if it leaks. As for the measures to prevent the leak from not exceeding the limit, please consult with your distributor.
If the leaked amount exceeds the limit, it may cause an oxygen deficiency accident.
- Be sure to use only the specified accessories and parts for installation work.
Failure to use the specified parts may result in water leakage, electric shocks, fire, or the unit falling.
- Install the air conditioner on a foundation that can withstand its weight.
Insufficient strength may result in the fall of equipment and causing injury.
- Carry out the specified installation work in consideration of strong winds, typhoons, or earthquakes.
Improper installation work may result in accidents due to fall of equipment.
- Make certain that all electrical work is carried out by qualified personnel according to the local laws and regulations and this installation manual, using a separate circuit.
Insufficient capacity of the power supply circuit or improper electrical construction may lead to electric shocks or fire.
- Make sure that all wiring is secure, using the specified wires and ensuring that external forces do not act on the terminal connections or wires.
Incomplete connection or fixing may cause a fire.
- When wiring between the indoor and outdoor units, and wiring the power supply, form the wires so that the frontside panel can be securely fastened.
If the frontside panel is not in place, overheat of the terminals, electric shocks or a fire may be caused.
- If refrigerant gas leaks during installation work, ventilate the area immediately.
Toxic gas may be produced if refrigerant gas comes into contact with fire.
- After completing the installation work, check to make sure that there is no leakage of refrigerant gas.
Toxic gas may be produced if refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.
- Before touching electric terminal parts, turn off power switch.




WARNING

- Live parts can be easily touched by accident. Never leave the unit unattended during installation or servicing when the service panel is removed.
- When planning to relocate former installed units, you must first recover the refrigerant after the pumping-down operation. Refer to chapter "[Precaution for pumping-down operation](#)" on page 11.
- Never directly touch any accidental leaking refrigerant. This could result in severe wounds caused by frostbite.



CAUTION

- Ground the air conditioner.
Grounding resistance should be according to national regulations
Do not connect the earth wire to gas or water pipes, lightning conductor or telephone earth wire. 
Incomplete grounding may cause electric shocks.
- Gas pipe.
Ignition or explosion may occur if the gas leaks.
- Water pipe.
Hard vinyl tubes are not effective grounds.
- Lightning conductor or telephone ground wire.
Electric potential may rise abnormally if struck by a lightning bolt.
- Be sure to install an earth leakage breaker.
Failure to install an earth leakage breaker may cause electric shocks and fire.
- Install drain piping according to this installation manual to ensure good drainage, and insulate the pipe to prevent condensation.
Improper drain piping may cause water leakage, and make the furnitures get wet.
- Install the indoor and outdoor units, power wire and connecting wire at least 1 meter away from televisions or radios to prevent image interference or noise.
(Depending on the radio waves, a distance of 1 meter may not be sufficient to eliminate the noise.)
- Do not rinse the outdoor unit. This may cause electric shocks or fire.



CAUTION

- Do not install the air conditioner in places such as the following:
 - Where there is mist of mineral oil, oil spray or vapor for example a kitchen.
Plastic parts may deteriorate, and cause them to fall out or water to leak.
 - Where corrosive gas, such as sulfurous acid gas, is produced.
Corrosion of copper pipes or soldered parts may cause the refrigerant to leak.
 - Where there is machinery which emits electromagnetic waves.
Electromagnetic waves may disturb the control system, and cause malfunction of the equipment.
 - Where flammable gases may leak, where carbon fiber or ignitable dust is suspended in the air or where volatile flammables, such as thinner or gasoline, are handled.
Such gases may cause a fire.
 - Where the air contains high levels of salt such as that near the ocean.
 - Where voltage fluctuates a lot, such as that in factories.
 - In vehicles or vessels.
 - Where acidic or alkaline vapour is present.

BEFORE INSTALLATION



Since maximum working pressure is 4.0 MPa or 40 bar, pipes of larger wall thickness may be required. Refer to paragraph "[Selection of piping material](#)" on page 5.

Precautions for R410A

 

- The refrigerant requires strict cautions for keeping the system clean, dry and tight.
 - Clean and dry
Foreign materials (including mineral oils or moisture) should be prevented from getting mixed into the system.
 - Tight
Read "[Precautions on refrigerant piping](#)" on page 6 carefully and follow these procedures correctly.
- Since R410A is a mixed refrigerant, the required additional refrigerant must be charged in its liquid state. (If the refrigerant is in state of gas, its composition changes and the system will not work properly).
- The connected indoor units must be indoor units designed exclusively for R410A.

Installation


- For installation of the indoor unit(s), refer to the indoor unit installation manual.
- Illustrations show class 125 outdoor unit type. Other types also follow this installation manual.
- This outdoor unit requires the pipe branching kit (optional) when used as the outdoor unit for the simultaneous operation system. Refer to catalogues for details.
- Never operate the unit without the thermistor (R3T, R4T), burning of the compressor may result.
- Be sure to confirm the model name and the serial no. of the outer (front) plates when attaching/detaching the plates to avoid mistakes.
- When closing the service panels, take care that the tightening torque does not exceed 4.1 N·m.

Accessories

Check if the following accessories are included with the unit

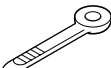Installation manual	1	
Clamp	2	

See the figure below for the location of the accessories.

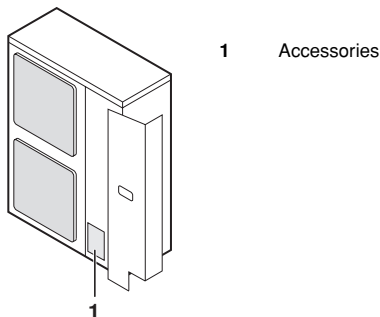


Handling


As shown in the figure, bring the unit slowly by grabbing the left and right grips.



Place your hands on the corner instead of holding the suction inlet in the side of the casing, otherwise the casing could be deformed.

 Take care not to let hands or objects come in contact with rear fins.

SELECTING INSTALLATION SITE

-  ■ Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals.
- Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.

- 1 Select an installation site where the following conditions are satisfied and that meets with your customer's approval.
 - Places which are well-ventilated.
 - Places where the unit does not bother next-door neighbours.
 - Safe places which can withstand the unit's weight and vibration and where the unit can be installed level.
 - Places where there is no possibility of flammable gas or product leak.
 - Places where servicing space can be well ensured.
 - Places where the indoor and outdoor units' piping and wiring lengths come within the allowable ranges.
 - Places where water leaking from the unit cannot cause damage to the location (e.g. in case of a blocked drain pipe).
 - Places where the rain can be avoided as much as possible.



For RZQ100~140B8W1B only


This unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment. If installed as a house-hold appliance it could cause electromagnetic interference.

- 2 When installing the unit in a place exposed to strong wind, pay special attention to the following.

Strong winds of 5 m/sec or more blowing against the outdoor unit's air outlet causes short circuit (suction of discharge air), and this may have the following consequences:


 - Deterioration of the operational capacity.
 - Frequent frost acceleration in heating operation.
 - Disruption of operation due to rise of high pressure.
 - When a strong wind blows continuously on the face of the unit, the fan can start rotating very fast until it breaks.

Refer to the figures for installation of this unit in a place where the wind direction can be foreseen.
- Turn the air outlet side toward the building's wall, fence or screen.

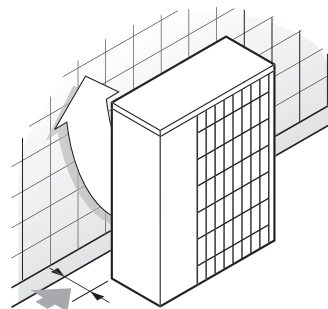


➡ Make sure there is enough room to do the installation

- Set the outlet side at a right angle to the direction of the wind.

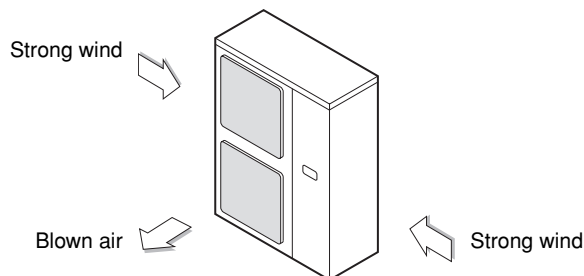


- 3 Prepare a water drainage channel around the foundation, to drain waste water from around the unit.
- 4 If the water drainage of the unit is not easy, please build up the unit on a foundation of concrete blocks, etc. (the height of the foundation should be maximum 150 mm).
- 5 If you install the unit on a frame, please install a waterproof plate within 150 mm of the underside of the unit in order to prevent the invasion of water from the lower direction.
- 6 When installing the unit in a place frequently exposed to snow, pay special attention to the following:
 - Elevate the foundation as high as possible.
 - Remove the rear suction grille to prevent snow from accumulating on the rear fins.

- 7 If you install the unit on a building frame, please install a waterproof plate (within 150 mm of the underside of the unit) or use a drain plug kit (option) in order to avoid the drainwater dripping. (See figure).

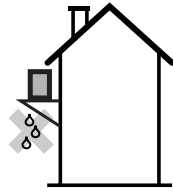

PRECAUTIONS ON INSTALLATION

- Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise after installation.
- In accordance with the foundation drawing in the figure, fix the unit securely by means of the foundation bolts. (Prepare four sets of M12 foundation bolts, nuts and washers each which are available on the market.)
- It is best to screw in the foundation bolts until their length are 20 mm from the foundation surface.

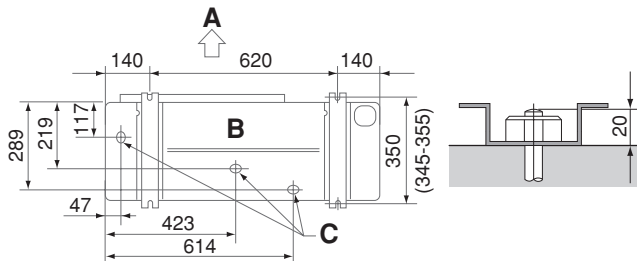


- A Discharge side
B Bottom view (mm)
C Drain hole

Installation method for prevention of falling over

If it is necessary to prevent the unit from falling over, install as shown in the figure.

- prepare all 4 wires as indicated in the drawing
- unscrew the top plate at the 4 locations indicated A and B
- put the screws through the nooses and screw them back tight

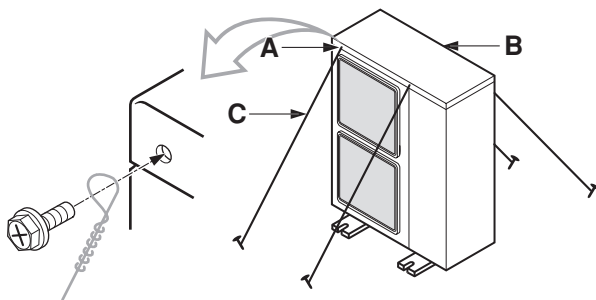

- A location of the 2 fixation holes on the front side of the unit
B location of the 2 fixation holes on the rear side of the unit
C wires: field supply

Drain pipe disposal

- If drain pipe disposal from the outdoor unit causes trouble (for example, if the drain water may splash on people) provide the drain piping using a drain socket (optional).
- Make sure the drain works properly.

INSTALLATION SERVICING SPACE

The numerical figures used in here represent the dimensions for the 71-100-125-140 class models. Figures between () indicate the dimensions for the 100-125-140 class models. (Unit: mm)

(Refer to "Precautions on installation" on page 4)


Precaution

(A) In case of non-stacked installation (See figure 1)


	Suction side obstacle	✓	Obstacle is present
	Discharge side obstacle	1	In these cases, close the bottom of the installation frame to prevent the discharged air from being bypassed
	Left side obstacle		
	Right side obstacle	2	In these cases, only 2 units can be installed.
	Top side obstacle		This situation is not allowed

(B) In case of stacked installation

1. In case obstacles exist in front of the outlet side.

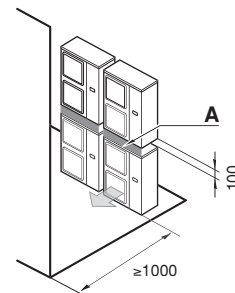

2. In case obstacles exist in front of the air inlet.

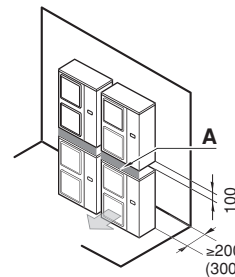


Do not stack more than one unit.


About 100 mm is required as the dimension for laying the upper outdoor unit's drain pipe. Get the portion A sealed so that air from the outlet does not bypass.

(C) In case of multiple-row installation (for roof top use, etc.)

1. In case of installing one unit per row.

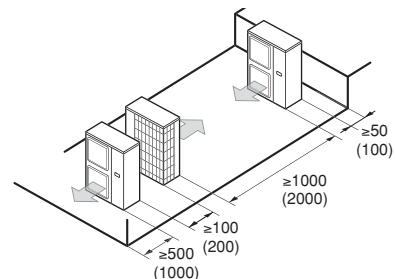

2. In case of installing multiple units (2 units or more) in lateral connection per row.

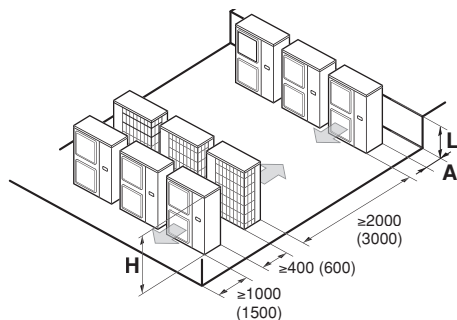

Relation of dimensions of H, A and L are shown in the table below.

	L	A
L ≤ H	0 < L ≤ 1/2H 1/2H < L	150 (250) 200 (300)
H < L	Installation impossible	

REFRIGERANT PIPE SIZE AND ALLOWABLE PIPE LENGTH



All field piping must be installed by a licensed refrigeration technician and must comply with relevant local and national regulations.



To persons in charge of piping work:

- Be sure to open the shut-off valve after piping installing and vacuuming is complete. (Running the system with the valve closed may break the compressor.)
- It is forbidden to discharge refrigerant into the atmosphere. Collect the refrigerant in accordance with the freon collection and destruction law.
- Do not use flux when brazing the refrigerant piping. For brazing, use phosphor copper brazing filler metal (BCuP) which does not require a flux. (If a chlorine flux is used, the piping will corrode, and if the flux contains fluoride, it will cause the coolant oil to deteriorate, adversely affecting the coolant piping system.)

Selection of piping material

- Construction material: phosphoric acid deoxidised seamless copper for refrigerant.
- Temper grade: use piping with temper grade in function of the pipe diameter as listed in table below.
- The pipe thickness of the refrigerant piping should comply with relevant local and national regulations. The minimal pipe thickness for R410A piping must be in accordance with the table below.

Pipe Ø	Temper grade of piping material	Minimal thickness t(mm)
6.4 / 9.5 / 12.7	O	0.80
15.9	O	1.00
19.1	1/2H	

O=Annealed
1/2H=Half hard

Refrigerant pipe size

Refer to [figure 3](#) for twin system, to [figure 4](#) for triple system and to [figure 5](#) for double twin system.

- Main pipe (pipe between outdoor and first branch).
The pipes should have the same size as the outdoor connections.

Refrigerant pipe size ^(a)			
Gas pipe			
Model	Size-down	Standard size	Size-up
RZQ71	Ø12.7	Ø15.9	—
RZQ100~140	—		Ø19.1
Liquid pipe			
Model	Size-down	Standard size	Size-up
RZQ71~140	Ø6.4	Ø9.5	Ø12.7

(a) In case of twin, triple and double twin applications, the listed refrigerant pipe sizes relate to the main pipes only. (L1 = the pipes between the outdoor unit and the branch in figures 3~5).

- Pipe between first branch and second branch (L2+L3) (only for double twin).

Liquid	Ø9.5
Gas	Ø15.9

- Pipe between branch and indoor units (L2~L3 for twin, L2~L4 for triple and L4~L7 for double twin).
These pipe sizes must have the same size as the connected indoor units pipe sizes. Branch: see marking '□' on figures 3, 4 and 5.

NOTE



- For new installations, use the standard pipe sizes.
- When using existing pipes, size-up is allowed as mentioned in the table above.
Size up is only allowed for pair combination (L1).
Additional restrictions towards allowable pipe lengths, as mentioned in the table "[Allowable pipe length](#)" on page 6, must be taken into account.
Not using the standard pipe size may result in capacity decrease. The installer must acknowledge this and judge this very carefully in function of the complete installation.

Selection of branch pipe

Twin	KHRQ22M20TA
Triple	KHRQ250H
Double twin	KHRQ22M20TA (3x)

Allowable pipe length and height difference

See the table below concerning lengths and heights. Refer to figures 2, 3, 4 and 5. Assume that the longest line in the figure corresponds with the actual longest pipe, and the highest unit in the figure corresponds with the actual highest unit.

Allowable pipe length					
		Liquid pipe size	Model		
			71	100	125 140
Maximum total one-way piping length					
Pair	L1	size-down	10 m (15 m)		
		standard	50 m (70 m)	75 m (95 m)	
		size-up	25 m (35 m)	35 m (45 m)	
• Twin and triple • Double twin	• L1+L2 • L1+L2+L4	size-down	10 m (15 m)		
		standard	50 m (70 m)	75 m (95 m)	
		size-up	25 m (35 m)	35 m (45 m)	
Maximum allowable piping length ^(a)					
Twin	L1+L2+L3	—	60 m	75 m	75 m
Triple	L1+L2+L3+L4		—		
Double twin	L1+L2+L3+L4+L5+L6+L7		—		
Maximum branch piping length					
• Twin and triple • Double twin	• L2 • L2+L4	—	20 m		
Maximum difference between branch lengths					
Twin	L2–L3	—	10 m	10 m	10 m
Triple	L2–L4		—		
Double twin	• L2–L3 • L4–L5 • L6–L7 • (L2+L4)–(L3+L7)		—		
Maximum height between indoor and outdoor					
All	H1	—	30 m		
Maximum height between indoors					
Twin, triple and double twin	H2	—	0.5 m		
Chargeless length					
All	L1+L2+L3+L4+L5+L6+L7	size-down	≤10 m		
		standard	≤30 m		
		size-up	≤15 m		

(a) Parenthesized figure represents the equivalent length.


Existing or pre-installed piping can be used

- Piping must comply with the criteria below.
 - Pipe diameter must comply with the limitations as indicated in paragraph "Refrigerant pipe size" on page 5.
 - Piping length must be within limits of the allowable piping length as in paragraph "Allowable pipe length and height difference" on page 6.
 - Piping must be designed for R410A. See paragraph "Selection of piping material" on page 5.
- Piping can be reused without cleaning when:
 - Total 1-way piping length: <50 m.
 - No compressor breakdown has occurred in the history of the unit to be replaced.
 - A correct pump down operation can be executed:
 - Operate the unit continuously for 30 minutes in cooling mode.
 - Execute a pump down operation.
 - Remove the airconditioning units to be replaced.
 - Check the contamination inside the existing piping.

If you cannot meet all these requirements, the existing pipes must be cleaned or replaced after removing the air conditioning units to be replaced.
- Prepare the flare connections for higher pressure. See paragraph "Cautions for flare connection" on page 8.

PRECAUTIONS ON REFRIGERANT PIPING

- Do not allow anything other than the designated refrigerant to get mixed into the freezing cycle, such as air, etc. If any refrigerant gas leaks while working on the unit, ventilate the room thoroughly right away.
- Use R410A only when adding refrigerant
Installation tools:
Make sure to use installation tools (gauge manifold charge hose, etc.) that are exclusively used for R410A installations to withstand the pressure and to prevent foreign materials (e.g. mineral oils and moisture) from mixing into the system.
Vacuum pump:
Use a 2-stage vacuum pump with a non-return valve
Make sure the pump oil does not flow oppositely into the system while the pump is not working.
Use a vacuum pump which can evacuate to -100.7 kPa (5 Torr, -755 mm Hg).
- In order to prevent dirt, liquid or dust from entering the piping, cure the piping with a pinch or taping.

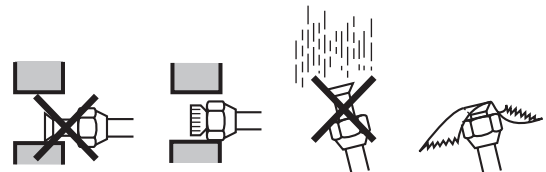

Place	Installation period	Protection method
Outdoor unit	More than a month	Pinch the pipe
	Less than a month	
Indoor unit	Regardless of the period	Pinch or tape the pipe

Great caution is needed when passing copper tubes through walls.

- In case of simultaneous operating system
 - Upward and downward piping should be performed at the main piping line.
 - Use branch piping kit (optional) for branching refrigerant pipes.

Precautions to be taken. (For details, refer to the manual attached to branch piping kit.)

- Install the branch pipes horizontally (with a maximum inclination of 15°) or vertically.
 - Length of branch pipe to the indoor unit should be as short as possible.
 - Try to keep lengths of both branch pipes to the indoor unit equal.
- When using existing refrigerant piping

Pay attention to the following points when using existing refrigerant piping

 - Perform a visual check on quality of residual oil in existing refrigerant piping.
This check is extremely important because using existing piping with deteriorated oil will cause compressor breakdown.
 - Put some residual oil of the pipes you want to reuse on a piece of white paper or on the white surface of an oil checking reference card and compare that oil color with the circled color of the oil checking reference card.
 - If oil color is identical to the circled color or darker, replace the piping, install new piping or clean the piping thoroughly.
 - If oil color is lighter, the pipes can be reused without cleaning.

An oil checking reference card is indispensable for such evaluation and can be obtained at your dealer.

 - In the following situations, the existing piping should not be re-used and new piping should be installed.
 - If the previously used model had problems with its compressor (this might cause oxidised coolant oil, scale residue and other adverse effects).
 - If the indoor or outdoor units were disconnected from the piping for a long period of time (water or dirt might have gotten into the piping).
 - If copper piping is corroded.
 - Flares should not be re-used but rather new ones made in order to prevent leaks.
 - Check welded connections for gas leaks, if the local piping has welded connections.
 - Replace deteriorated insulation with new material.

REFRIGERANT PIPING

- Field pipes can be installed in four directions.

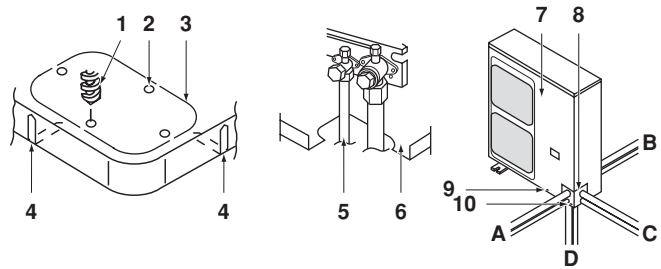



Figure - Field pipes in four directions

- | | |
|----|----------------------------------|
| 1 | Drill |
| 2 | Center area around knockout hole |
| 3 | Knockout hole |
| 4 | Slit |
| 5 | Connecting pipe |
| 6 | Bottom frame |
| 7 | Front plate |
| 8 | Pipe outlet plate |
| 9 | Screw front plate |
| 10 | Pipe outlet plate screw |
| A | Forward |
| B | Backward |
| C | Sideways |
| D | Downward |

- Cutting out the two slits makes it possible to install as shown in the figure "Field pipes in four directions".
(Use a metal saw to cut out the slits.)
- To install the connecting pipe to the unit in a downward direction, make a knockout hole by penetrating the center area around the knockout hole using a Ø6 mm drill. (See figure "Field pipes in four directions".)
- After knocking out the knock-out, it is recommended to apply repair paint to the edge and the surrounding end surfaces to prevent rusting.

Preventing foreign objects from entering

Plug the pipe through-holes with putty or insulating material (procured locally) to stop up all gaps, as shown in the figure.

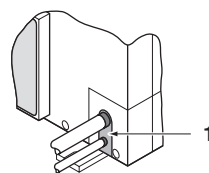

- | | |
|---|--|
| 1 | Putty or insulating material
(produced locally) |
|---|--|

Insects or small animals entering the outdoor unit may cause a short circuit in the electrical box.


Cautions for handling stop valve

- The stop valves for indoor-outdoor connecting piping are closed at shipment from the factory.




Make sure to keep the valve open during operation.

The names of parts of the stop valve are shown in the figure.

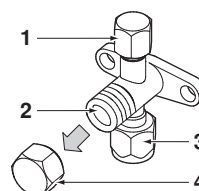

- | | |
|---|-------------------------|
| 1 | Service port |
| 2 | Shut-off valve |
| 3 | Field piping connection |
| 4 | Valve cover |

- Since the side boards may be deformed if only a torque wrench is used when loosening or tightening flare nuts, always lock the shut-off valve with a wrench and then use a torque wrench. Do not place wrenches on the valve cover.

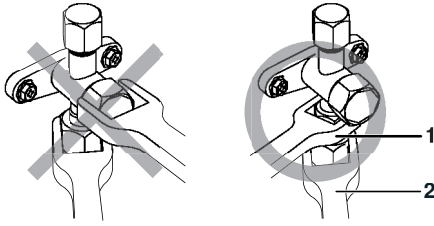


- 1 Spanner
2 Torque wrench

Applying an excessive torque may distort the interior stop valve surface causing gas to leak inside the valve and causing the flare nut to crack eventually.

Do not apply force on the valve cover, this may result in a refrigerant leak.

 
- For cooling operation under low ambient temperature or any other operation under low pressure, apply silicon pad or similar to prevent freezing of the gas stop valve flare nut (see figure). Freezing of the flare nut may cause refrigerant leak.



How to use the shut-off valve


Use hexagonal wrenches 4 mm and 6 mm.

- Opening the valve
 - Place the hex wrench on the valve bar and turn counter-clockwise.
 - Stop when the valve bar no longer turns. It is now open.
- Closing the valve
 - Place the hex wrench on the valve bar and turn clockwise.
 - Stop when the valve bar no longer turns. It is now closed.

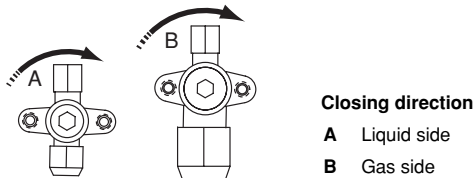

Cautions for handling the valve cover

- The valve cover is sealed where indicated by the arrow. Refer to the figure. Take care not to damage it.

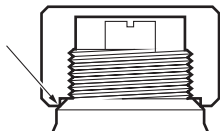

- After operating the valve, be sure to tighten the valve cover properly.

Tightening torque	
Liquid pipe	13.5~16.5 N•m
Gas pipe	22.5~27.5 N•m

- Check for refrigerant leakage after tightening the cap.

Cautions for handling service port


- Always use a flexible charge hose with a push-rod and valve to enable recovery of remaining refrigerant in the charge hose.
- After the work, tighten the valve cover in place. Tightening torque: 10.8~14.7 N•m

Precautions when connecting field piping and regarding insulation

- Be careful not to let the indoor and outdoor branch piping come into contact with the compressor terminal cover. If the liquid-side piping insulation might come into contact with it, adjust the height as shown in the figure below. Also, make sure the field piping does not touch the bolts or outer panels of the compressor.
- When the outdoor unit is installed above the indoor unit the following can occur:
The condensated water on the stop valve can move to the indoor unit. To avoid this, please cover the stop valve with sealing material.
- If the temperature is higher than 30°C and the humidity is higher than RH 80%, then the thickness of the sealing materials should be at least 20 mm in order to avoid condensation on the surface of the sealing.
- Be sure to insulate the liquid and gas-side field piping and the refrigerant branch kit.

Any exposed piping may cause condensation or burns if touched.

(The highest temperature that the gas-side piping can reach is around 120°C, so be sure to use insulating material which is very resistant.)

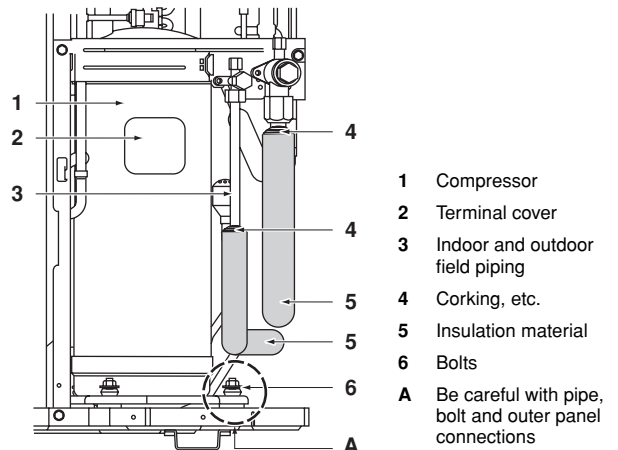

Cautions for flare connection


- Please refer to the table for the dimensions for processing flares and for the tightening torques. (Too much tightening will end up in splitting of the flare.)

Piping size	Flare nut tightening torque	A dimensions for processing flares (mm)	Flare shape
Ø6.4	14.2~17.2 N•m (144~176 kgf•cm)	8.7~9.1	
Ø9.5	32.7~39.9 N•m (333~407 kgf•cm)	12.8~13.2	
Ø12.7	49.5~60.3 N•m (504~616 kgf•cm)	16.2~16.6	
Ø15.9	61.8~75.4 N•m (630~770 kgf•cm)	19.3~19.7	
Ø19.1	97.2~118.6 N•m (989.8~1208 kgf•cm)	23.6~24.0	

If a torque wrench is not available, be aware that the tightening torque may increase suddenly. Do not tighten nuts any further than to the angle as listed.

Piping size	Further tightening angle	Recommended arm length of tool
Ø6.4	60°~90°	150 mm
Ø9.5		200 mm
Ø12.7	30°~60°	250 mm
Ø15.9		300 mm
Ø19.1	20°~35°	450 mm

- When connecting the flare nut, apply refrigerating machine oil to the flare (inside and outside) and first screw the nut 3 or 4 turns by hand.
Coat here with ether or ester oil.

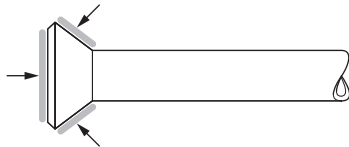

- After completing the installation, carry out a gas leak inspection of the piping connections with nitrogen and such.


Cautions for necessity of a trap

Since there is fear of the oil held inside the riser piping flowing back into the compressor when stopped and causing liquid compression phenomenon, or cases of deterioration of oil return, it will be necessary to provide a trap at an appropriate place in the riser gas piping.

- Trap installation spacing. (See figure 6)
 - A Outdoor unit
 - B Indoor unit
 - C Gas piping
 - D Liquid piping
 - E Oiltrap
 - H Install trap at each difference in height of 10 m.
- A trap is not necessary when the outdoor unit is installed in a higher position than the indoor unit.

Cautions for brazing

- Be sure to carry out a nitrogen blow when brazing.
Brazing without carrying out nitrogen replacement or releasing nitrogen into the piping will create large quantities of oxidised film on the inside of the pipes, adversely affecting valves and compressors in the refrigerating system and preventing normal operation. When brazing pipes however, do not use oxidation preventers. Residue of such preventers may result in choking of pipes or malfunction of components.
- When brazing while inserting nitrogen into the piping, nitrogen must be set to 0.02 MPa with a pressure-reducing valve (=just enough so that it can be felt on the skin).

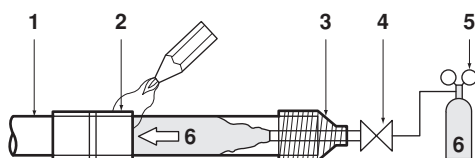

- 1 Refrigerant piping
- 2 Part to be brazed
- 3 Taping
- 4 Hands valve
- 5 Pressure-reducing valve
- 6 Nitrogen

EVACUATING

- Do not purge the air with refrigerants. Use a vacuum pump to vacuum the installation. No additional refrigerant is provided for air purging.
- Pipes inside the units were checked for leaks by the manufacturer. The refrigerant pipes fit on site are to be checked for leaks by the installer.
- Confirm that the valves are firmly closed before leak test or vacuuming.

Set up for vacuuming and leak test: see figure 8

- A Pair system
- B Simultaneous operation system
- 1 Pressure gauge
- 2 Nitrogen
- 3 Refrigerant
- 4 Weighing machine
- 5 Vacuum pump
- 6 Stop valve
- 7 Main pipe
- 8 Branched pipes
- 9 Pipe branching kit (optional)

Procedure for leak test

Leak test must satisfy EN378-2.

- Evacuate the pipes and check vacuum⁽¹⁾. (No pressure increase for 1 minute.)
- Break the vacuum with a minimum of 2 bar of nitrogen. (Never pressurize more than 4.0 MPa.)
- Conduct leak test by applying soap water, etc. to the connecting part of the pipes.
- Discharge nitrogen.
- Evacuate and check vacuum again⁽¹⁾.
- If the vacuum gauge no longer rises, the stop valves can be opened.



Following should be executed if there is a possibility of moisture remaining in the pipe (if piping work is carried out during the raining season or over a long period of time, rainwater may enter the pipe during work).

After evacuating the system for 2 hours, pressurize the system to 0.05 MPa (vacuum break) with nitrogen gas and evacuate the system again using the vacuum pump for 1 hour to -100.7 kPa (vacuum drying). If the system cannot be evacuated to -100.7 kPa within 2 hours, repeat the operation of vacuum break and vacuum drying. Then after leaving the system in vacuum for 1 hour, confirm that the vacuum gauge does not rise.

After air purging with a vacuum pump it may happen that the refrigerant pressure does not rise, not even if the stop valve is opened. Reason for this phenomenon is the closed state of for instance the expansion valve in the outdoor unit circuit, but this is not a problem for running the unit.

- (1) Use a 2-stage vacuum pump with a non return valve which can evacuate to -100.7 kPa (5 Torr, -755 mm Hg).
Evacuate the system from the liquid and gas pipes by using a vacuum pump for more than 2 hours and bring the system to -100.7 kPa. After keeping the system under that condition for more than one hour, check if the vacuum gauge rises or not. If it rises, the system may either contain moisture inside or have leaks.

CHARGING REFRIGERANT

Precaution for servicing



When performing service on the unit requiring the refrigerant system to be opened, refrigerant must be evacuated according to local regulations.

This unit requires additional charging of refrigerant according to the length of pipe connected at the site. Charge the refrigerant to the liquid pipe in its liquid state through the service port of the liquid stop valve. Since R410A is a mixed refrigerant, its composition changes if charged in a state of gas and normal system operation would no longer be assured.

On this model it is not necessary to charge additionally if the piping length ≤ 30 m.

<5 m: See "Total charging weight of the refrigerant (after a leak, etc.)" on page 11.

Additional charging of refrigerant

- The additional charging amounts relate to the refrigerant piping length as in "Maximum total one-way piping length" of the table in paragraph "Allowable pipe length and height difference" on page 6. (E.g. twin: $L1+L2+L3$).
- Over 30 m, please add refrigerant quantity according to following table.

For future servicing, mark with a circle the selected amount on the tables below

For pair system

Table 1: Additional charging of refrigerant <unit: kg>

Standard liquid pipe size				
Connected piping length is between				
Model	30~40 m	40~50 m	50~60 m	60~75 m
RZQ71	0.5	1.0	—	
RZQ100~140			1.5	2.0
Size up liquid pipe size				
Connected piping length is between				
Model	15~20 m	20~25 m	25~30 m	30~35 m
RZQ71	0.5	1.0	—	
RZQ100~140			1.5	2.0

For twin, triple, and double twin system


Please charge additionally according to the following calculation. (additional amount is $R1+R2$)

1. $G1$: total length of $\varnothing 9.5$ mm liquid piping
 $G2$: total length of $\varnothing 6.4$ mm liquid piping
- 2.a $G1 > 30$ m
 calculate length over 30 m ($=G1-30$ m)
 Based on this length decide $R1$, $R2$ in the table
- b $G1 \leq 30$ m and $G1+G2 > 30$ m
 calculate total length over 30 m ($=G1+G2-30$ m)
 Based on this decide $R2$ in the table, $R1=0$
3. Total additional charge amount
 $R=R1+R2$ (kg)

Table 2: Length <unit: m>, additional charging of refrigerant <unit: kg>


Model	Liquid piping	\varnothing	Length exceeding "Chargeless length"					
			0~10	10~20	20~30	30~40	40~55	
RZQ71~140	Main	9.5	0.5	1.0	1.5	2.0	2.5	R1
	Branch	6.4	0.3	0.6	0.9	1.2	1.5	R2
	Branch							

Example 1

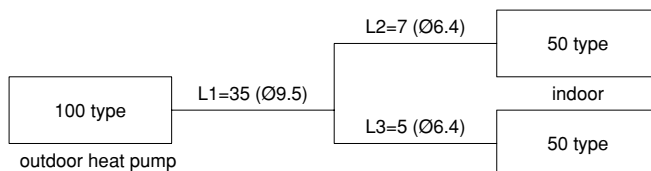

- 1 $G1=L1=35$ m $G2=L2+L3=7+5=12$
- 2 Over 30 m
- a $G1-30=5$ m $\rightarrow \varnothing 9.5 R1=0.5$ kg
- b $G2=12$ m $\rightarrow \varnothing 6.4 R2=0.6$ kg
- 3 Refrigerant charge amount= $R=R1+R2=0.5+0.6=1.1$ kg

Example 2

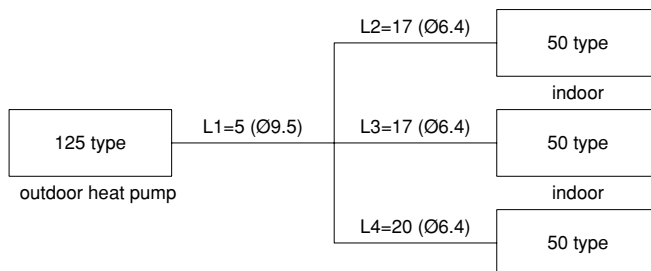

- 1 $G1=L1=5$ m $G2=L2+L3+L4=17+17+20=54$
- 2 Over 30 m
- a $G1=5$ m $\rightarrow R1=0.0$ kg
- b $(G1+G2)-30=(5+54)-30=29 \rightarrow \varnothing 6.4 R2=0.9$ kg
- 3 Refrigerant charge amount= $R=R1+R2=0.0+0.9=0.9$ kg



In case of complete recharge of the refrigerant, please first execute vacuuming. Execute this vacuuming from the service port. Do not use the port of the stop valve for vacuuming. Vacuuming can not be executed completely using such port.

Position of service port:

Heat pump: Heat pump units have 2 ports on the piping. One between the liquid receiver and the electronic expansion valve and another one between the heat exchanger and the 4-way valve.



Systems with sized-up liquid pipe

- Replace 30 m by 15 m in calculations above and use the table below.
- $G1$: total length of $\varnothing 12.7$ mm liquid piping.

Model	Liquid piping	Ø	Length exceeding “Chargeless length”					
			0~5 m	5~10 m	10~15 m	15~20 m		
RZQ71	Main	12.7	0.5	1.0	—	—	R1	
RZQ100~140	Main				1.5	2.0		
RZQ71~140	Branch	6.4	0.3		0.6		R2	
RZQ140	Branch	9.5	0.5		1.0		R2	

Total charging weight of the refrigerant (after a leak, etc.)

- The total charging amounts relate to the refrigerant piping length as in "Maximum allowable piping length" of the table in paragraph "Allowable pipe length and height difference" on page 6. (E.g. twin: L1+L2).

Table 3: Total charging amount <unit: kg>

		Refrigerant piping length							
Model	Liquid pipe size	3~5 m	5~10 m	10~20 m	20~30 m	30~40 m	40~50 m	50~60 m	60~75 m
RZQ71	size-down	1.8	1.8	—					
	standard	1.8	1.8	2.3	2.8	3.3	3.8	—	
RZQ100~140	size-down	3.3	3.3	—					
	standard	3.3	3.3	3.8	4.3	4.8	5.3	5.8	6.3

Model	Liquid pipe size	Refrigerant piping length							
		3~5 m	5~10 m	10~15 m	15~20 m	20~25 m	25~30 m	30~35 m	
RZQ71	size-up	2.3	2.3	2.8	3.3	3.8	—		
		3.8	3.8	4.3	4.8	5.3	5.8	6.3	

(a) When piping length is less than 5 m, a complete recharging of the unit is required. Charge the unit with the refrigerant charge as indicated.

Precaution for pumping-down operation

The outdoor unit is equipped with a low pressure switch or a low pressure sensor to protect the compressor.

- ✎ Never short-circuit the low pressure switch or low pressure sensor during pump-down operation.

Take the following steps to perform the pumping-down operation.

■ Preliminary measures

- Make sure to cut off power supply.
Open the front panel and cover the PCB and terminal board with insulation sheet to avoid electric shock by accidental touching of live parts.
- Close the front panel before leaving the outdoor unit. You cannot leave the unit unattended in case the front panel remains opened.
- Turn on the power supply and carry out pumping-down operation according to the following procedure.

■ Pump down operation

Procedure	Precaution
1 Make sure that stop valves both on liquid and on gas side are open.	—
2 Push the pumping-down operation button on the PC board of the outdoor unit.	Compressor and outdoor fan will start operation automatically. The indoor unit fan may automatically start running. Please pay attention to this.
3 Once operation stops after 3 or 5 minutes ^(a) , close the stop valve on the liquid side and gas side securely. (See "How to use the shut-off valve" on page 8)	Never leave the outdoor unit unattended with opened front panel when power supply is on.
4 Turn off the power supply.	

(a) If after finishing pumping-down operation the outdoor unit does not operate, not even when the remote controller switch is turned on, the remote controller may or may not indicate "U4". But this is not a malfunction.

- After finishing the pumping-down operation, make sure to have removed the insulation sheet that was placed in the switch box as a protective measure like in chapter "Preliminary measures" on page 11.
- When in need of operation, turn off the main power supply and turn it on again. Make sure that stop valves both on liquid and gas side are open and be sure to operate the unit in cooling operation during test run.

ELECTRICAL WIRING WORK



- All wiring must be performed by an authorized electrician.
- All components procured on the site and all electric construction should comply with the applicable local and national codes.
- High voltage
To avoid electrical shock, make sure to disconnect the power supply 1 minute or more before servicing the electrical parts. Even after 1 minute, always measure the voltage at the terminals of main circuit capacitors or electrical parts and, before touching, make sure that those voltages are 50 V DC or less.



To persons in charge of electrical wiring work:

Do not operate the unit until the refrigerant piping is complete. (Running it before the piping is ready will break the compressor.)


Precautions on electrical wiring work

- Before obtaining access to terminal devices, all supply circuits must be interrupted.
- Use only copper wires.
- The wiring between the indoor unit and outdoor unit must be for 230 V.
- Do not turn on the main switch until all the wiring is completed. Make sure that the main switch has a contact separation of at least 3 mm in all poles.
- For W1
Make sure to connect power supply cables in normal phase. If connected in reverse phase, the remote controller of the indoor unit indicates "U1" and the equipment cannot operate. Change any two of the three power supply cables (L1, L2, L3) to correct phase.
If the contact in the magnetic switch should be forcibly turned on while the equipment is inoperative, the compressor will burn out. Never try to forcibly turn on the contact.
- Never squeeze bundled cables into a unit.
- Fix cables so that cables do not make contact with the pipes (especially on high pressure side).
- Secure the electrical wiring with clamping material as shown in the figure below so that it does not come in contact with the piping, particularly on the high-pressure side. Make sure no external pressure is applied to the terminal connectors.
- When installing the earth leakage breaker make sure that it is compatible with the inverter (resistant to high frequency electrical noise) to avoid unnecessary opening of the earth leakage breaker.
- As this unit is equipped with an inverter, installing a phase advancing capacitor not only will deteriorate power factor improvement effect, but also may cause capacitor abnormal heating accident due to high-frequency waves. Therefore, never install a phase advancing capacitor.


Secure the wiring in the order shown below.

- 1 Secure the ground wire to the shut-off valve attachment plate so that it does not slide.
- 2 Secure the ground wire to the shut-off valve attachment plate one more time along with the electric wiring and the inter-unit wiring.

- Lay the electrical wiring so that the front cover does not rise up when doing wiring work and attach the front cover securely.

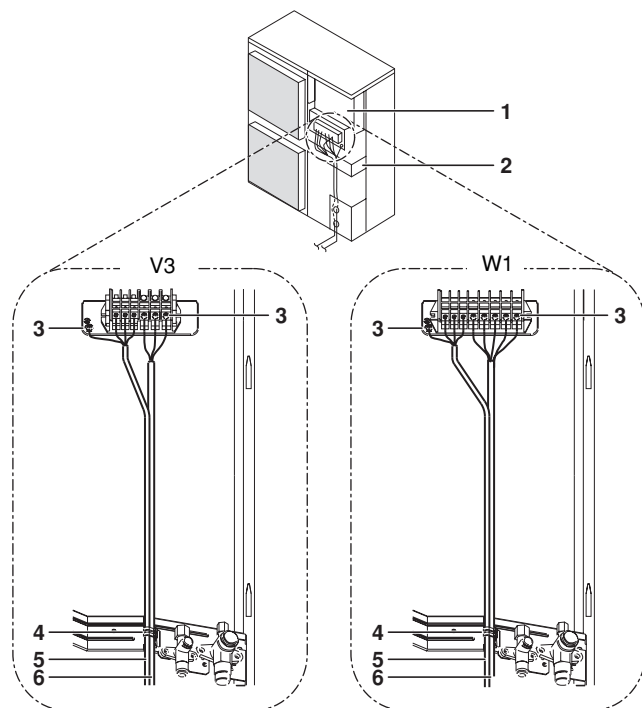

- 1 Switch box
- 2 Stop valve mounting plate
- 3 Ground
- 4 Tie-wrap
- 5 Wiring between units
- 6 Power supply and ground wiring

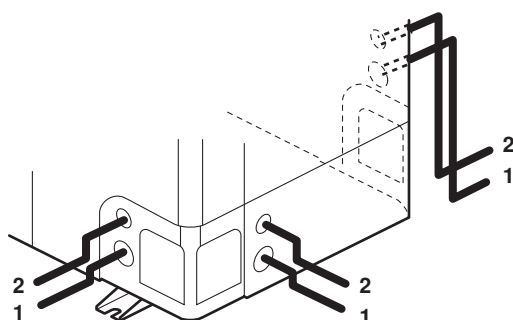

- 1 Power supply wiring and earth wire
- 2 Wiring between unit

- When cables are routed from the unit, a protection sleeve for the conduits (PG-insertions) can be inserted at the knock-out hole. (See figure 7)


- 1 Wire
- 2 Bush
- 3 Nut
- 4 Frame
- 5 Hose
- A Inside
- B Outside

When you do not use a wire conduit, be sure to protect the wires with vinyl tubes to prevent the edge of the knock-out hole from cutting the wires.

- Follow the electric wiring diagram for electrical wiring works.
- Form the wires and fix the cover firmly so that the cover may be fit in properly.

Precautions on wiring of power supply and inter-unit wiring

- Use a round crimp-style terminal for connection to the power supply terminal board. In case it cannot be used due to unavoidable reasons, be sure to observe the following instruction.

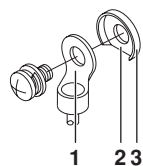

- 1 Round pressure terminal
- 2 Cut out section
- 3 Cup washer

- Do not connect wires of different gauge to the same power supply terminal. (Looseness in the connection may cause overheating.)
- When connecting wires of the same gauge, connect them according to the below figure.



- Use the correct screwdriver to tighten the terminal screws. Small screwdrivers can damage the screw head and prevent appropriate tightening.
- Over-tightening the terminal screws can damage the screws.
- See the table below for tightening torques for the terminal screws.

Tightening torque (N·m)	
M4 (X1M)	1.2~1.8
M5 (X1M)	2.0~3.0
M5 (EARTH)	3.0~4.0

- Refer to the installation manual attached to the indoor unit for wiring of indoor units, etc.
- Attach an earth leakage breaker and fuse to the power supply line. (See figure 9)

- I Pair
- II Twin
- III Triple
- IV Double twin
- M Master
- S Slave
- 1 Earth leakage breaker
- 2 Fuse
- 3 Remote controller

- In wiring, make certain that prescribed wires are used, carry out complete connections, and fix the wires so that outside forces are not applied to the terminals.

Specifications of standard wiring components

	RZQ71	RZQ100+125V3	RZQ100~140W1
Minimum circuit amps (MCA) ^(a)	17.7	28.2	17.7
Recommended field fuse	20 A	32 A	20 A
Wire type ^(b)	H05VV-U3G		H05VV-U5G
Size	Wiring size must comply with the applicable local and national code		
Wire type of wiring between the units	H05VV-U4G2.5		

(a) Stated values are maximum values (see electrical data of combination with indoor units for exact values).

(b) Only in protected pipes, use H07RN-F when protected pipes are not used.

NOTE



The earth leakage breaker must be a high-speed type breaker of 30 mA (<0.1 s).

TEST OPERATION



WARNING

Live parts can be easily touched by accident.

Never leave the unit unattended during installation or servicing when the service panel is removed.


Pre-run checks

Items to check	
Electrical wiring Inter-unit wiring Ground wire	<ul style="list-style-type: none"> Is the wiring as mentioned on the wiring diagram? Make sure no wiring has been forgotten and that there are no missing phases or reverse phases. Is the unit properly grounded? Is the wiring between units connected in series correct? Are any of the wiring attachment screws loose? Is the insulation resistance at least 1 MΩ? - Use a 500 V mega-tester when measuring insulation. - Do not use a mega-tester for low-voltage circuits.
Refrigerant piping	<ul style="list-style-type: none"> Is the size of the piping appropriate? Is the insulation material for the piping attached securely? Are both the liquid and gas pipes insulated? Are the shut-off valves for both the liquid side and the gas side open?
Extra refrigerant	<ul style="list-style-type: none"> Did you write down the extra refrigerant and the refrigerant piping length?

- Be sure to perform a test run.
- Be sure to fully open the liquid-side and gas-side stop valves. If you operate the unit with stop valves closed, the compressor will break down.
- Be sure to execute the first test run of the installation in cooling mode operation.
- Never leave the unit unattended with an open front panel during test run.

Test run

- Be sure to turn power on at least 6 hours before starting operation in order to protect the compressor.
- Make sure the liquid and gas shut-off valves are open.

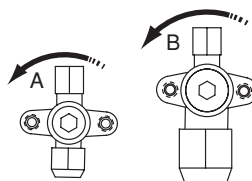

Opening direction

A Liquid side

B Gas side

Remove the cap and turn counterclockwise with a hex wrench until it stops

- Be sure to close the frontside panel before operation, as not doing so can cause electric shock.
- Be sure to set the unit to cooling operation mode.
- Press the inspection/test operation button of the remote controller 4 times (2 times in case of a wireless remote controller) to go into the test run mode.
- Press the ON/OFF button within 10 seconds to start the test run and check the operation status for about 6 minutes. The refrigerant pressure may not rise immediately, even if the shut-off valve is opened after an air purge is performed using a vacuum pump. This is because the indoor unit refrigerant piping is closed off with electric valves inside. This will not create any problems during operation.
- Push the air flow direction adjust button and check if the unit is responding to the new air flow direction position.
- Press the inspection/test operation button of the remote controller 2 times to go into check mode and to make sure that the malfunction code displays "00" (=normal). In case the malfunction code does not display "00", refer to ["Failure diagnosis at the moment of first installation" on page 14](#).
- If the inspection/test operation button is pressed 4 times during a test run, the unit returns to normal operation.
- Check all functions according to the operation manual.

Precautions regarding test-runs

- In order to detect stop valves failing to open, operation of the unit is compulsorily performed in cooling for 2-3 minutes during the first test run, even if the remote controller was set to heating operation. In this case, the remote controller will have kept displaying the heating symbol all the time and the unit will switch to heating operation automatically after elapse of that time.
- In case you cannot operate the unit in test run mode for any unusual reason, refer to ["Failure diagnosis at the moment of first installation" on page 14](#).
- In case you cannot operate the unit in test run mode, the unit usually returns to its normal state after 30 minutes.
- In case of a wireless remote controller, execute the test run only after having installed the indoor unit decoration panel with infra-red receiver first.
- In case the panels of indoor units are not yet installed to the indoor units, make sure to shut off the power supply after finishing the complete test run.
- A complete test run surely includes shutting off power after having performed a normal operation stop on the remote controller. Do not stop operation by turning circuit breakers off.

NOTES

- Disconnection or wiring error (between power supply and outdoor unit, between outdoor unit and indoor units, between indoor unit and remote controller).
- The fuse on the outdoor unit PCB may have run out.
- If the remote controller shows “*LB*” as an error code, there is a possibility that either the shut-off valve is closed, or the outlet vent is closed.
- If the error code “*U2*” is displayed on the remote controller, check for voltage imbalance.
- If the error code “*U4*” or “*UF*” is displayed on the remote controller, check the inter-unit branch wiring connection.
- The reversed phase protection detector of this product only works during the initialisation stage after a power reset. The reversed phase protection detector is designed to stop the product in case of an abnormality when the product is started up.
- When the reversed phase protection circuit forced the unit to stop, check if all phases are existing. If this is the case, shut off the power supply to the unit and replace two of three phases. Turn on power again and start the unit.
- Reversed phase detection is not performed while the product is operating.
- In case of possible reversal of phases after a momentary black out of power and the power goes on and off while the product is operating, install a reversed phase protection circuit on site. Such situation is not unimaginable when using generators. Running the product in reversed phase can break the compressor and other parts.
- For a missing phase in case of W1 units, “*E7*” or “*U2*” will be displayed on the remote controller of the indoor unit. Operation will be impossible with either one of these phenomena. If this happens, turn off the power, re-check the wiring and switch the position of two of the three electrical wires. (If operation is not possible, do not under any circumstances force the electromagnetetic contactor on.)

Dismantling of the unit, treatment of the refrigerant, of oil and of other parts must be done in accordance with relevant local and national legislation.

This image shows a full page of blank graph paper. The grid consists of small, uniform squares formed by thin, light gray lines. There are no margins, text, or other markings on the page.

WIRING DIAGRAM

○	: Wire clamp
□ □	: Terminal
⊞	: Connector
— —	: Relay connector
—■—	: Field wiring

BLK	: Black
GRN	: Green
BRN	: Brown
BLU	: Blue
ORG	: Orange
RED	: Red
WHT	: White
YLW	: Yellow



: Refer to the service manual for connecting wiring to X6A.

: The position of the selector switches (DS1) indicate the factory setting. For details, refer to the service manual.

A1P	Printed circuit board
A2P	Printed circuit board (INV)
BS1	Push button switch (forced defrosting/pump down)
C1~C3	Capacitor
DS1	Dip switch
E1HC	Crankcase heater
F1U~F4U	Fuse
HAP (A1P)	Service monitor (green)
HAP (A2P)	Service monitor (green)
H1P (A1P)	Service monitor (red)
K1M	Magnetic relay (for V3 model only)
K1M	Magnetic contactor (for W1 model only)
K1R	Magnetic relay (Y1S)
K2R	Magnetic relay
K3R	Magnetic relay (E1HC)
K4R•K5R	Magnetic relay
L1R	Reactor
M1C	Motor (compressor)
M1F•M2F	Motor (fan)
PS	Power circuit
Q1DI	Earth leakage breaker (field supply)

R1•R2	Resistor
R1T	Thermistor (air)
R2T	Thermistor (coil)
R3T	Thermistor (discharge pipe)
R4T	Thermistor (suction pipe)
R5T	Thermistor (power module)
RC	Signal receiver circuit
S1NPL	Pressure sensor (low)
S1PH	Pressure switch (high)
S1PL	Pressure switch (low)
TC	Signal transmission circuit
V1R	Power module
V2R•V3R	Diode module
V1T	Insulated gate bipolar transistor
X6A	Connector (option)
X1M	Terminal strip
Y1E	Expansion valve
Y1S	4 way valve
Y2S	Solenoid valve
Z1C~Z5C	Noise filter
Z1F	Noise filter (with surge absorber)
Z2F	Noise filter

NOTES

