






INSTALLATION MANUAL

Domestic hot water tank for air to water heat pump system

EKHWS150B3V3
EKHWS200B3V3
EKHWS300B3V3

EKHWS200B3Z2
EKHWS300B3Z2

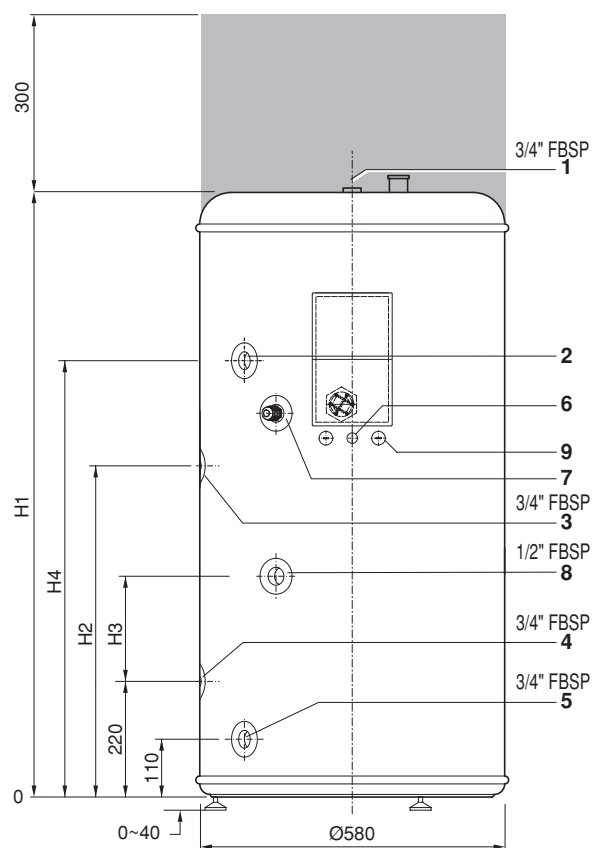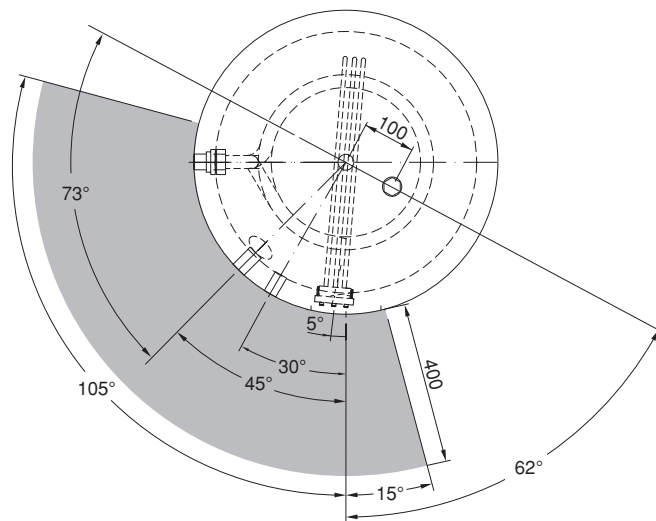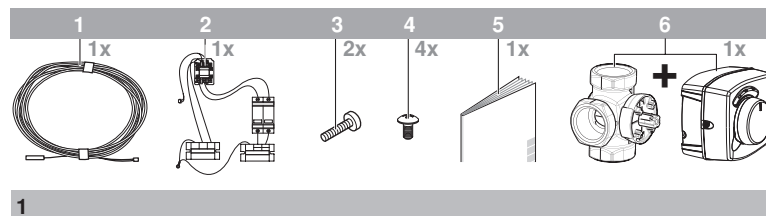

CONTENTS

	Page
Introduction.....	1
General information	1
Scope of this manual	1
Model identification	1
Accessories	1
Accessories supplied with the domestic hot water tank	1
Optional equipment	1
Installation of the EKHWS domestic hot water tank	2
Main components.....	2
Outlook diagram.....	3
Installation guidelines.....	3
Installing the domestic hot water tank.....	3
Connecting the water circuits	3
Field wiring.....	5
Maintenance	6
Troubleshooting	6
General guidelines	6
General symptoms.....	7
Technical specifications	7
Domestic hot water tank specifications	7



READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION. KEEP THIS MANUAL IN A HANDY PLACE FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

BEFORE OPERATING THE UNIT, MAKE SURE THE INSTALLATION HAS BEEN CARRIED OUT CORRECTLY BY A PROFESSIONAL DAIKIN DEALER AND IN ACCORDANCE WITH RELEVANT NATIONAL AND LOCAL REGULATIONS.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

THE UNIT DESCRIBED IN THIS MANUAL IS DESIGNED FOR INDOOR INSTALLATION ONLY AND FOR AMBIENT TEMPERATURES RANGING 0°C~35°C.

The English text is the original instruction. Other languages are translations of the original instructions.

INTRODUCTION

General information

Thank you for purchasing this domestic hot water tank.

The EKHWS domestic hot water tank with integrated 3 kW electrical booster heater can be connected to the indoor unit. The domestic hot water tank is available in three sizes: 150, 200 and 300 litre. All models can be floor mounted, while the 150 litre model can be wall mounted as well via option kit EKWBSWW150. The 200 and 300 litre models are also available as 400 V versions.

NOTE




Especially for the United Kingdom

For installation of an EKHWSU domestic hot water tank, refer to the installation manual supplied with the tank.

Scope of this manual

This installation manual describes the procedures for unpacking, installing and connecting the EKHWS domestic hot water tanks.

Model identification

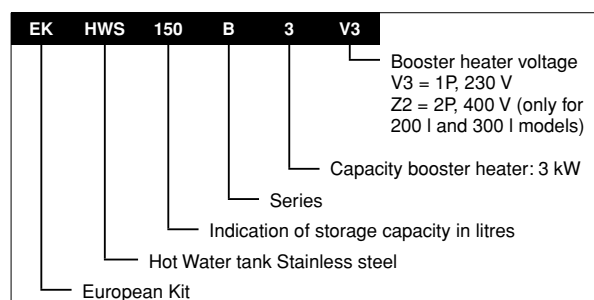

ACCESSORIES

Accessories supplied with the domestic hot water tank

See figure 1

- 1 Thermistor + connection wire (12 m)
- 2 Contactor - fuse assembly
- 3 Contactor fixing screw
- 4 Tapping screw
- 5 Installation manual
- 6 3-way valve + motor

NOTE



For accessories supplied with the EKHWSU domestic hot water tank, refer to the manual supplied with the tank.

Optional equipment

EKWBSWW150: kit, including a wall bracket for a domestic hot water tank of 150 litres.


INSTALLATION OF THE EKHWS DOMESTIC HOT WATER TANK




- The total **altherma**[®] by **DAIKIN** system (indoor unit and outdoor unit) is designed for combination with an **altherma**[®] by **DAIKIN** domestic hot water tank. In case another tank is being used in combination with the **altherma**[®] by **DAIKIN** indoor unit, Daikin cannot guarantee neither good operation nor reliability of the system. For those reasons Daikin cannot give warranty of the system in such case.
- The temperatures of supplied hot water by the **altherma**[®] by **DAIKIN** domestic hot water tank can exceed 50°C. Relevant national or local regulations requiring additional temperature control devices must be complied with.
- The equipment is not intended for use in a potentially explosive atmosphere.
- Only this tank can be used in combination with the solar kit option.
- Domestic hot water quality must be according to EU directive 98/83 EC.
- A drain device should be installed on the cold water connection on the domestic hot water tank.
- For safety reasons, it is not allowed to add ethylene glycol to the water circuit. Adding ethylene glycol might lead to contamination of the domestic water if a leakage would occur in the heat exchanger coil.
- It is important that the storage capacity of the domestic hot water tank meets normal daily fluctuations in consumption of domestic hot water without any fall of the water outlet temperature during use.
- Immediately after installation, the domestic hot water tank must be flushed with fresh water. This procedure must be repeated at least once a day the first 5 consecutive days after installation.

In case of limited consumption of domestic hot water, e.g. at holiday residences or at houses that are occasionally not occupied, the domestic hot water tank installation must be fitted with a shunt pump.

- The shunt pump can be time-controlled,
- the shunt pump must operate to circulate the complete volume of the domestic hot water tank 1.5 times per hour,
- and the shunt pump must operate, or be programmed for operation, during 2 uninterrupted hours per day at least.

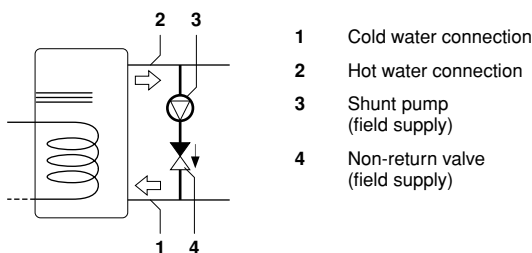


In case of very long field water piping between the domestic hot water tank and the hot water end point (shower, bath, etc.) it can take more time before the hot water from the domestic hot water tank reaches the hot water end point.

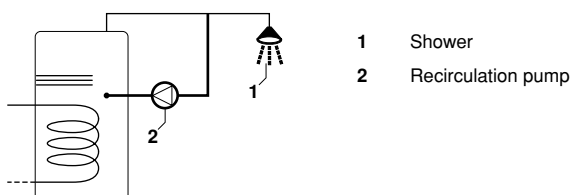

If required connect a recirculation pump in between the hot water end point and the recirculation hole in the domestic hot water tank.

Following descriptions are only for EKHWS*V3 and EKHWS*Z2 models, not for EKHWSU*V3 models

Main components

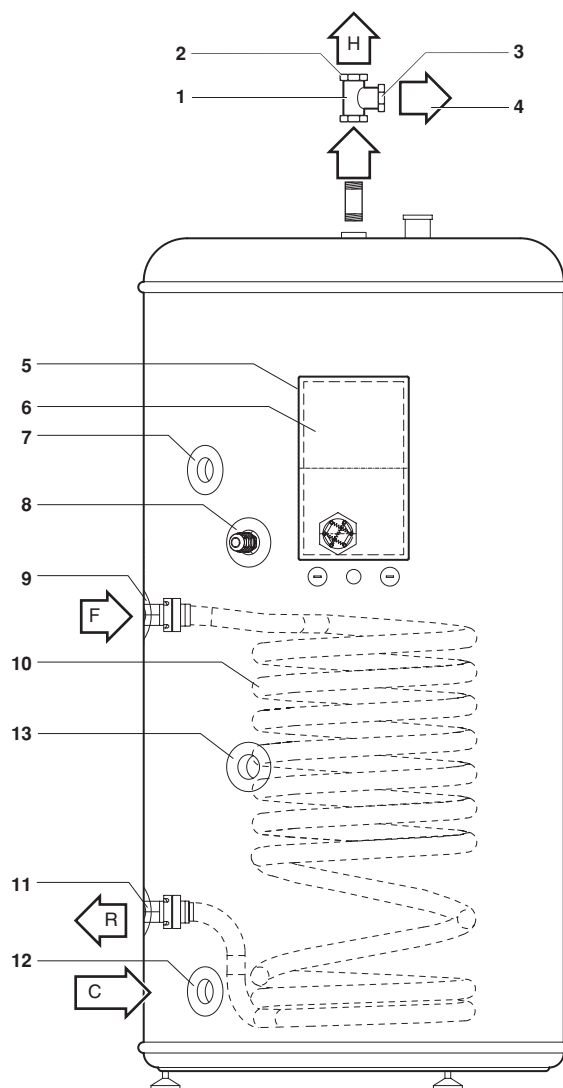

- | | |
|----|--|
| 1 | Field supply |
| 2 | Hot water connection |
| 3 | Pressure relief valve connection |
| 4 | Pressure relief valve (field supply) |
| 5 | Electrical box |
| 6 | Electrical box lid |
| 7 | Recirculation hole |
| 8 | Thermistor socket |
| 9 | Flow inlet connection |
| 10 | Heat exchanger coil |
| 11 | Return outlet connection |
| 12 | Cold water connection |
| 13 | Threaded thermistor hole for use with solar kit option. Refer to the Installation manual EKSOLHWAV1. |

Safety devices



- The domestic hot water tank relief valve connections may not be used for other purpose.
- Do not install heaters without thermal cut-outs.

- Thermal protector — The booster heater in the domestic hot water tank is equipped with a thermal protector. The thermal protector is activated when the temperature becomes too high. When activated, the protector has to be reset on the domestic hot water tank by pressing the red button (for access, remove the electrical box lid).



The electrical box lid must only be opened by a licensed electrician.

Switch off the power supply before opening the electrical box lid.

- Pressure relief valve — A pressure relief valve (field supply) in accordance with relevant local and national regulations, and with an opening pressure of maximum 10 bar must be connected to the pressure relief valve connection.
- If a discharge pipe is connected to the pressure relief device it must be installed in a continuously downward direction and in a frost-free environment. It must be left open to the atmosphere.
- The supplied temperature and pressure relief valve and T-piece must be correctly installed to the hot water outlet.

Outlook diagram

Outlook diagram, see [figure 2](#).


- 1 Hot water and pressure relief valve connection
- 2 Recirculation hole
- 3 Flow inlet connection from the main indoor unit
- 4 Return outlet connection to the main indoor unit
- 5 Cold water connection
- 6 Domestic hot water tank electrical box cable entry
- 7 Thermistor socket
- 8 Threaded thermistor hole for use with solar kit option. See Installation manual EKSOLHWAV1.
- 9 Domestic hot water tank electrical box cable entry for use with optional solar kit

Domestic hot water tank model	H1	H2	H3	H4
EKHWS150B3V3	900	475	185	605
EKHWS200B3V3/Z2	1150	630	200	830
EKHWS300B3V3/Z2	1600	630	200	830

Installation guidelines

- Keep in mind the following guidelines when installing the domestic hot water tank:
- The installation location is frost-free.
- Make sure to make the piping in size 1" or more (and reduce to 3/4" at the inlet of the tank) as to have sufficient water volume in the piping between indoor unit and domestic hot water tank.
- Locate the domestic hot water tank in a suitable position to facilitate ease of maintenance; remember access is required to the electrical box. Refer to the grey-coloured zones indicated in [figure 2](#).
- Provide a connection for the pressure relief valve blow-off and drain.
- To avoid back siphonage it is advised to install a non-return valve on the water inlet of the domestic hot water tank in accordance with local and national regulations.
- Take care that in the event of a leak, water can not cause any damage to the installation space and surroundings.

 - The domestic hot water tank model EKHWS(U)150B3V3 can be floor or wall mounted. In case of wall mounting, wall mounting kit EKWBSWW150 is required (separate ordering).



Installing the domestic hot water tank


- 1 Check if all domestic hot water tank accessories (see ["Accessories" on page 1](#)) are enclosed.
- 2 When floor mounting, place the domestic hot water tank on a level surface. When wall mounting (only for EKHWS(U)150B3V3 model), make sure the wall is sturdy. In both cases, make sure the domestic hot water tank is mounted level.
- 3 Apply thermal paste to the thermistor and insert the thermistor as deep as possible in the thermistor socket. Fix using the nut provided.

Connecting the water circuits

Refer to the chapter "Typical application examples" described in the installation manual delivered with the indoor unit for details on connecting the water circuits and the motorised 3-way valve.


Connecting the 3-way valve

- 1 Refer to the figure below before making the connection.

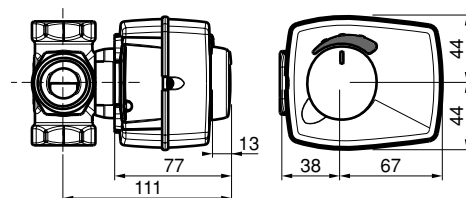


- 2 Installation position.

It is advised to connect the 3-way valve as close as possible to the indoor unit. It can be installed in accordance with one of the following four configurations.

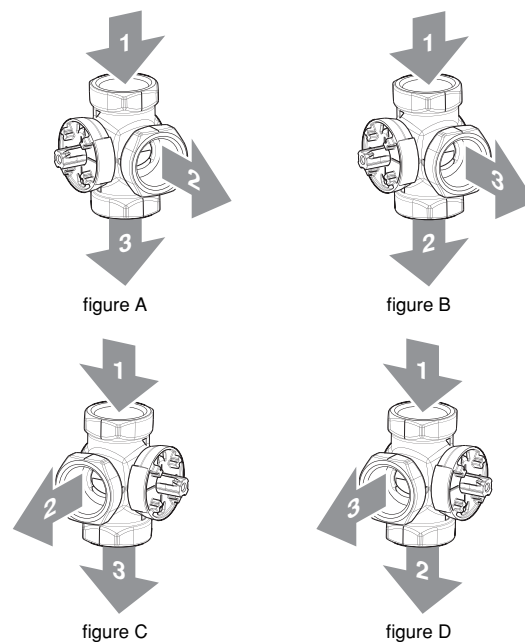


- 1 From **altherma**® by **DAIKIN** indoor unit
- 2 To domestic hot water tank
- 3 To room heating

- 3 Unpack the 3-way valve body and 3-way valve motor.
Verify that following accessories are provided with the motor.

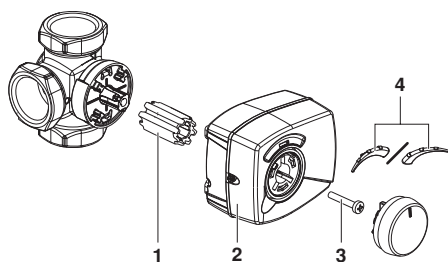


- 1 Sleeve
- 2 Valve motor cover
- 3 Screw
- 4 Scale

- 4 Install the 3-way valve body in the pipework.
- Make sure the shaft will be positioned in such a way that the motor can be mounted and replaced.
 - Put the sleeve on the valve and turn the valve to the middle position of the scale plate.
Check that the valve is positioned as in the figure below. It should be blocking the outlet connection to the domestic hot water for 50% and the outlet connection to the room heating also for 50%.

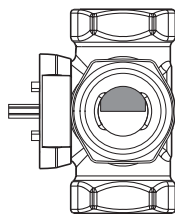

Installation in accordance with
figure A and figure B

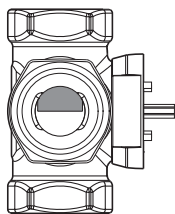

Installation in accordance with
figure C and figure D




If the valve is not positioned in this way before mounting the motor, the valve will give way to both domestic water and room heating during operation.

- 5 When installing in accordance with figure A or figure D, open the valve motor cover by loosening the screw and change the jumper so as to change the rotation direction of the valve.

By default the jumper is factory set to apply for installation in accordance with figure B and figure C.

Installation in accordance with
figure A and figure D

Installation in accordance with
figure B and figure C

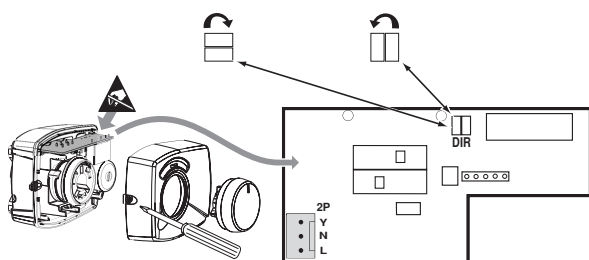


Rotation direction of the valve

- 6 Push the motor on the motor sleeve.
Make sure not to rotate the sleeve during this action, so as to maintain the valve position as set during step 4.

7




- 8 Put the scale on the valve as shown below.

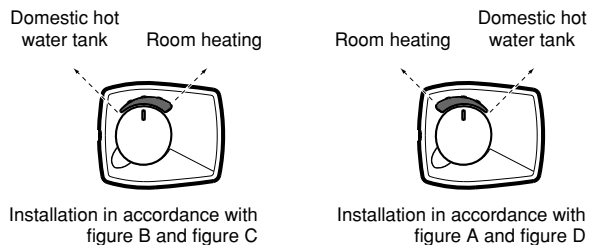

Installation in accordance with
figure B and figure C

Installation in accordance with
figure A and figure D

- 9 Make sure to firmly fix the power supply cord onto the 3-way valve body with a field supplied cable tie like in illustration below.

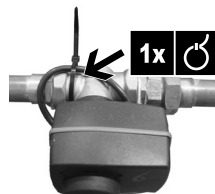

- 10 Perform the wiring in the indoor unit in accordance with the following figure:

8	9	10
3-way valve		
BRN	BLU	BLK
L	N	Y

Refer also to the drawing on page 6.

- 11 Connect the water inlet and water outlet.
12 Connect the hot and cold water supply tubes.
13 Connect the pressure relief valve (field supply, opening pressure maximum 10 bar) and drain.



If a discharge pipe is connected to the pressure relief device it must be installed in a continuously downward direction and in a frost-free environment. It must be left open to the atmosphere.

Field wiring



- A main switch or other means for disconnection, having a contact separation in all poles, must be incorporated in the fixed wiring in accordance with relevant local and national legislation.
- All field wiring and components must be installed by a licensed electrician and must comply with relevant European and national regulations.
- The field wiring must be carried out in accordance with the wiring diagram supplied with the unit and the instructions given below.
- The domestic hot water tank must be earthed via the indoor unit.

Power circuit and cable requirements



- Be sure to use a dedicated power circuit. Never use a power circuit shared by another appliance.
- Use one and same dedicated power supply for the outdoor unit, indoor unit, backup heater and domestic hot water tank.

For cable requirements and specifications, refer to "Field wiring" in the indoor unit installation manual supplied with the EKHBH/X unit.

NOTE



Select the power cable in accordance with relevant local and national regulations.



Make sure all field wiring is insulated from the tank body and heater element or can resist temperatures to 90°C.

Thermistor cable

The distance between the thermistor cable and power supply cable must always be at least 5 cm to prevent electromagnetic interference on the thermistor cable.


Procedure for EKHWS*V3 and EKHWS*Z2




Switch off the power supply before making any connections.

Connections to be made in the domestic hot water tank electrical box

- 1 Refer to the wiring diagram sticker in the domestic hot water tank switch box.

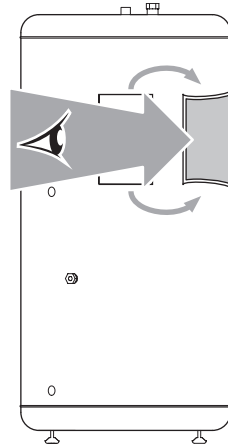


- 2 Make sure to ensure strain relief of the cable by correct use of the PG nipple and PG nut (mounted on the domestic hot water tank).

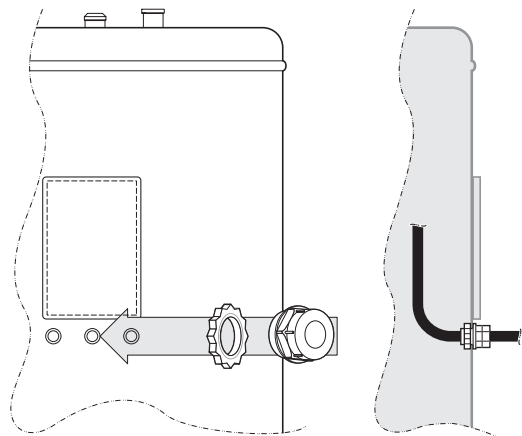

Connections to be made in the indoor unit switch box

- 3 Mount the prewired contactor (K3M), circuit breaker (F2B) and terminal blocks (X3M, X4M). The contactor must be fixed with the 2 supplied contactor screws and the terminal blocks must be fixed with the 2x 2 supplied tapping screws.
- 4 Plug the connector connected to the contactor K3M in the socket X13A on the PCB.
- 5 Plug the thermistor cable connector in the socket X9A on the PCB.
- 6 Connect the prewired earth wires of the terminal block X3M and X4M to the earthing screw.
- 7 Connect the booster heater power supply and thermal protection cable (field supply) to terminal X4M earth, 1, 2, and X2M 13, 14.
- 8 Connect the booster heater power supply cable to the terminal block X3M.
- 9 Fix the cables to the cable tie mountings with cable ties to ensure strain relief.
- 10 Set DIP switch SS2-2 on the PCB to ON.
- 11 When routing out cables, make sure that these do not obstruct mounting of the indoor unit cover.

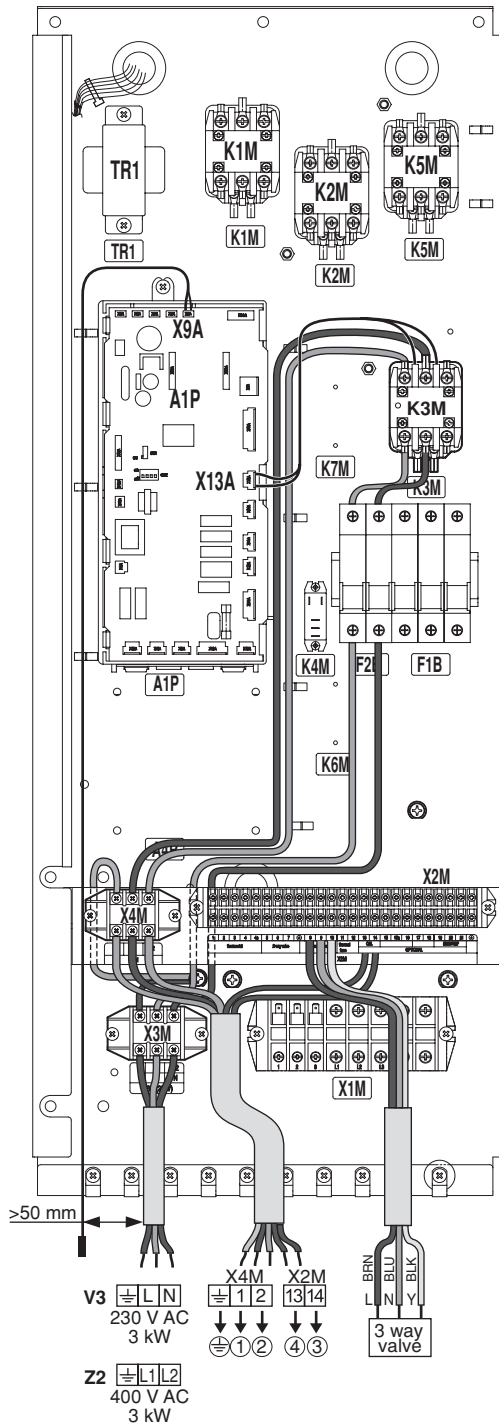

MAINTENANCE

In order to ensure optimal availability of the unit, a number of checks and inspections on the unit and the field wiring have to be carried out at regular intervals.



- Before carrying out any maintenance or repair activity, always switch off the circuit breaker on the supply panel, remove the fuses or open the protection devices of the unit.
- Make sure that before starting any maintenance or repair activity, also the power supply to the outdoor unit is switched off.
- Domestic hot water tank pressure relief valve (field supply)
 - A check for correct operation of the pressure relief valve installed on your domestic hot water tank, has to be carried out at least every 6 months: it is important that the lever on the valve is actuated to prevent accumulation of mineral deposits that may impair valve operation and to confirm that the valve and discharge pipe are not blocked. The lever should be operated slowly and smoothly to avoid a sudden rush of hot water from the discharge pipe. Failure to operate the relief valve actuating lever may result in the water heater exploding.
 - Continuous leakage of water from the discharge pipe may indicate a problem with the water heater.
- Domestic hot water tank booster heater
 - It is advisable to remove lime buildup on the booster heater to extend its life span, especially in regions with hard water. To do so, drain the domestic hot water tank, remove the booster heater from the domestic hot water tank and immerse in a bucket (or similar) with lime-removing product for 24 hours.

TROUBLESHOOTING

This section provides useful information for diagnosing and correcting certain troubles which may occur in the unit.

General guidelines

Before starting the troubleshooting procedure, carry out a thorough visual inspection of the unit and look for obvious defects such as loose connections or defective wiring.

Before contacting your local dealer, read this chapter carefully, it will save you time and money.



- When carrying out an inspection on the supply panel or on the switch box of the unit, always make sure that the circuit breaker of the unit is switched off.

When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. Under no circumstances safety devices may be bridged or changed to a value other than the factory setting. If the cause of the problem cannot be found, call your local dealer

General symptoms

Symptom 1: No water flow from hot taps

POSSIBLE CAUSES	CORRECTIVE ACTION
The main water supply is off.	Check that all shut off valves of the water circuit are completely open.

Symptom 2: Water from hot taps is cold

POSSIBLE CAUSES	CORRECTIVE ACTION
The thermal cut-out(s) has/have operated	<ul style="list-style-type: none">• Check and reset button(s).• Check if thermistor is correctly installed in thermistor socket.
The indoor unit (EKHBH/X) is not operating.	Check the indoor unit (EKHBH/X) operation. Refer to the manual delivered with the indoor unit. If any faults are suspected, contact your local dealer.

Symptom 3: Intermittent water discharge

POSSIBLE CAUSES	CORRECTIVE ACTION
Thermal control failure (water will be hot).	Switch off power to the indoor unit. When discharge has stopped, check the thermal controls and replace if faulty. Contact your local dealer.
The expansion vessel is broken.	Replace the expansion vessel.

TECHNICAL SPECIFICATIONS

Domestic hot water tank specifications

	EKHWS150B3V3	EKHWS200B3V3	EKHWS200B3Z2	EKHWS300B3V3	EKHWS300B3Z2
Volume	150 l	200 l	200 l	300 l	300 l
Internal heat exchanger volume	2 l	3 l	3 l	3 l	3 l
Overall dimensions (Ø x H)	580 x 900 mm	580 x 1150 mm	580 x 1150 mm	580 x 1600 mm	580 x 1600 mm
Booster heater, power supply	230 V 50 Hz 1P	230 V 50 Hz 1P	400 V 50 Hz 2P	230 V 50 Hz 1P	400 V 50 Hz 2P
Booster heater, running current	13 A	13 A	7.5 A	13 A	7.5 A
Booster heater, capacity	3 kW	3 kW	3 kW	3 kW	3 kW
Connections	3/4" FBSP ^(a)	3/4" FBSP ^(a)	3/4" FBSP ^(a)	3/4" FBSP ^(a)	3/4" FBSP ^(a)
Weight (empty)	37 kg	45 kg	45 kg	59 kg	59 kg
Mounting	Wall or floor	Floor	Floor	Floor	Floor

(a) FBSP = Female British Standard Pipe



4PW54951-1 0000000B

Copyright © Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4PW54951-1