


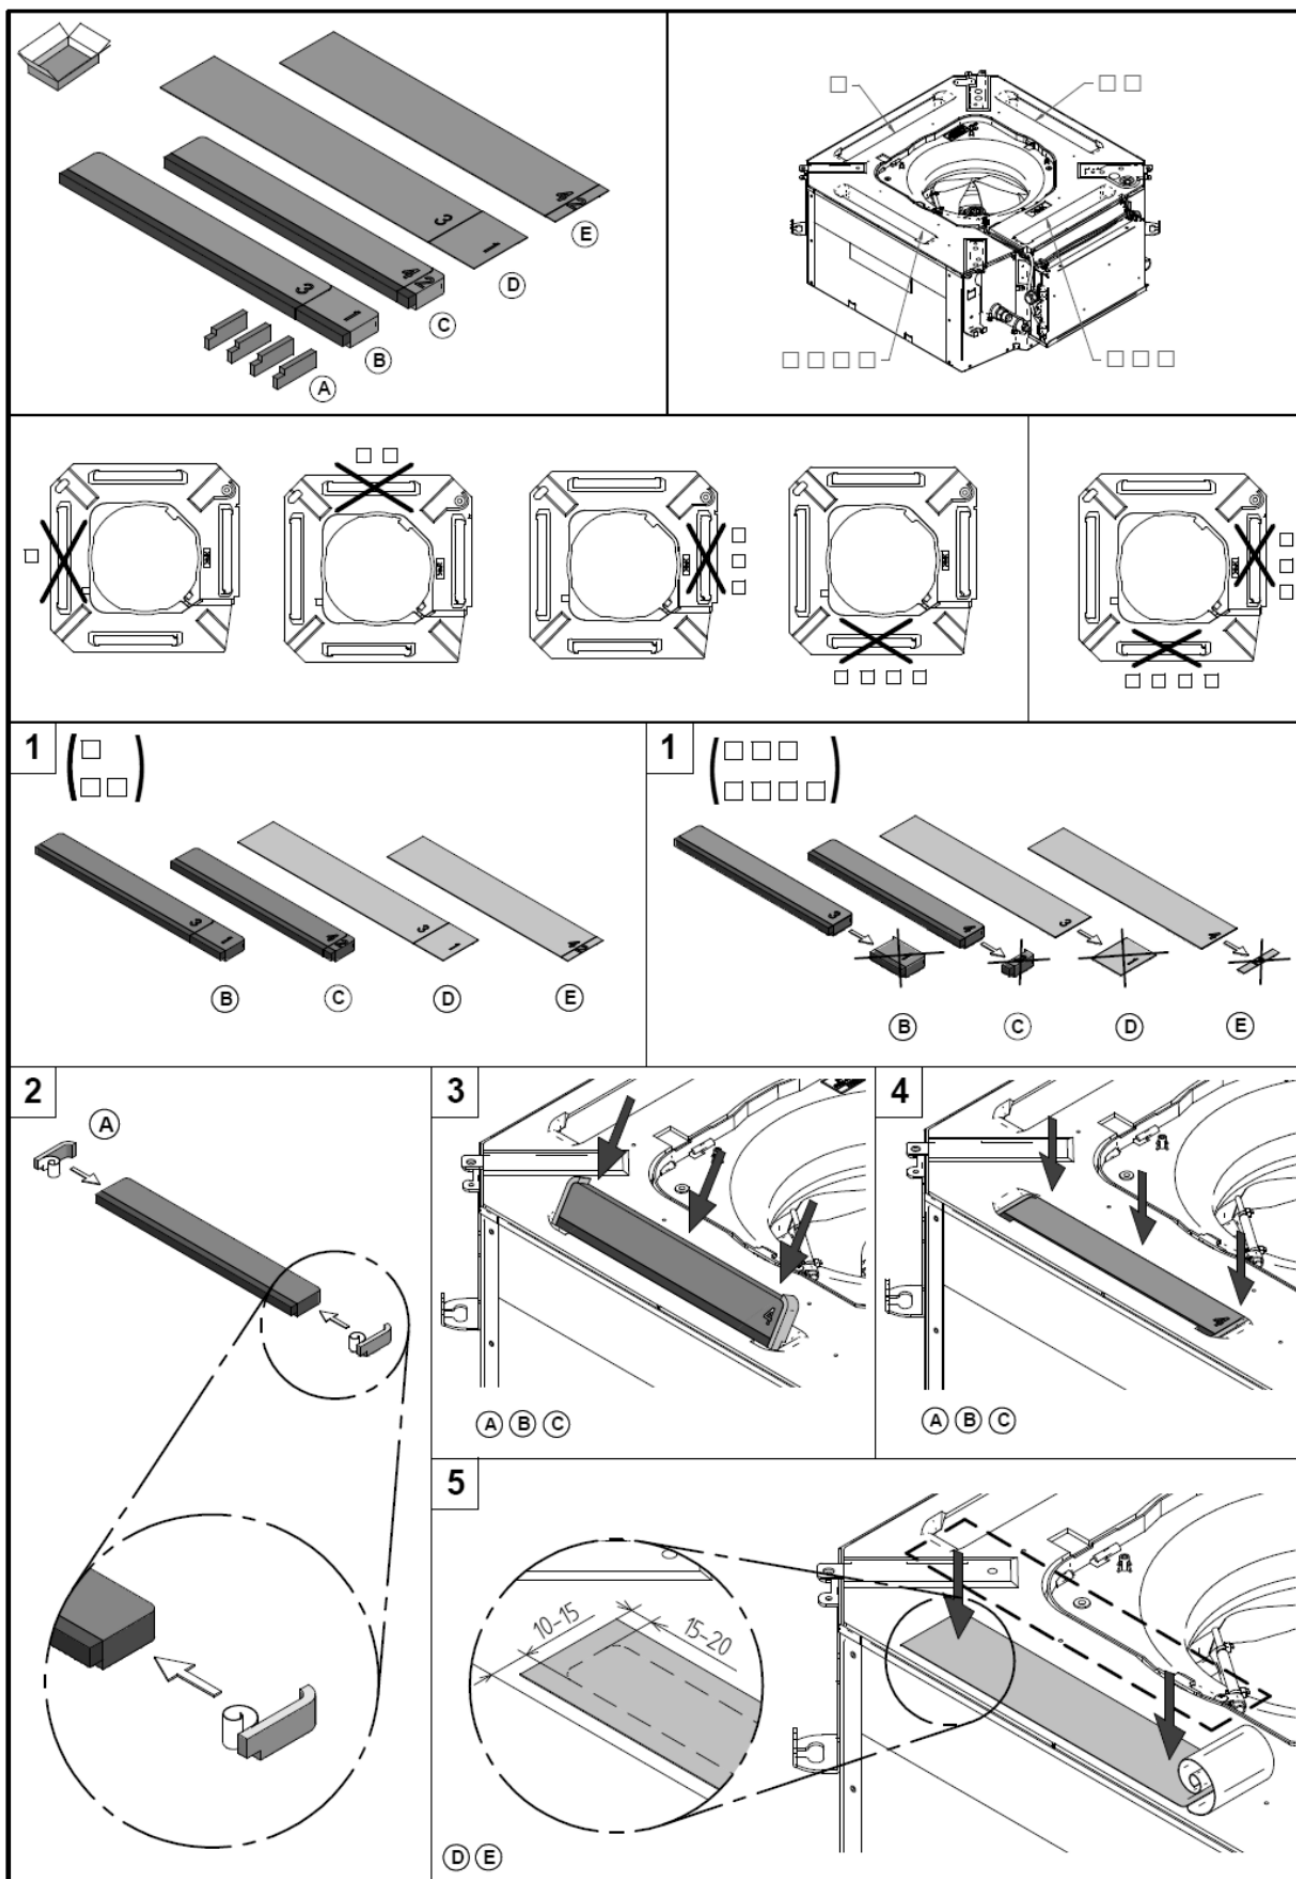

- The 3 different kinds of setting such as "Mode number", "First code number" and "Second code number" must be made by the remote controller.
- The setting and operation procedure are written in the installation manual provided with the remote controller.
- Do not perform settings that are not listed in the table.

Setting according to number of air outlets used

Set the "Second code number". It is shown in the table below depending on the number of air outlet used.

Setting	Mode number (Note)	First code number	Second code number
4-way flow	13(23)	1	01
3-way flow			02
2-way flow			03